

SKODA SUPERB ESTATE - 2015 to 2024

H620-FRSD - VARIABLE FLOOR RAISED
H620-FOUT - VARIABLE FLOOR REMOVED
H620-FNO - NO VARIABLE FLOOR

PACKAGING REQUIREMENTS.

FOUT / FNO

• 12x tabs SA loop fastener

FRSD

• 6x tabs SA loop fastener

TAILGATE COVER

• 26x tabs SA loop fastener



Photo shows Variable floor removed



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth.**

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.





STEP I. PREPERATIONS

• Remove the load cover. It may be replaced later.

VARIABLE FLOOR REMOVED VERSION ONLY

 Please remove the variable floor, it cannot be reinserted with the boot liner fitted. (image A)

VARIABLE FLOOR RAISED VERSION ONLY

 Please raise the variable floor to its highest position. (image B)





STEP 2. FITTING BASE

• Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (image C)

VARIABLE FLOOR REMOVED & NO VARIABLE FLOOR ONLY



Stick 6 self adhesive loop fastener tabs (3 on each side) onto the plastic panel between the chrome bar and the rubber seal. (Image D) Line the self adhesive loop fastener tabs with the hook fastener welded onto the boot liner base.





STEP 3. FITTING THE FRONT - SNOUT

- PLUS / SPLIT VERSION ONLY Fasten the hook
 & loop fastener between the side panel and the seat panel. (image E)
- Starting with the middle headrest loop the hook and loop fastener straps around both headrest posts. (image F). Make sure to hold the front part of the base in position, to prevent pulling the Hatchbag too far up. Repeat the procedure with the left and right seat.



You MUST unfasten the hook & loop fastener + the headrest straps before you recline the rear seat uppers. ('Please refer to REAR PLUS options on website to see detailed photo')





STEP 3. CONT FITTING THE FRONT - SNIN

- The front panel has a removable top section. When your load safely net is in situ remove this top section.
- The front panel will finish just underneath the cassette, with the hook fastener attaching directly to the carpet. (image G)
- Should you wish to remove the load safety net, refasten the top section and refer to the SNOUT instructions. (image H & I)







STEP 4 FITTING THE SIDES

- Attach the side of the boot liner by fastening the hook fastener sewn along the top edge of the boot liner sides to the top edge of the boot carpet. (image J) Start at the tailgate end as highlighted in image L orange circle.
- At the section near the back seats, wrap the first black hook fastener around the corner as shown in image K



Stick 6 self adhesive loop fastener tabs (3 on each side) onto the plastic side panel next to the rubber seal. (Image L) Line the self adhesive loop fastener tabs with the hook fastener welded onto the boot liner base.







OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the Rear Plus Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the boot liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

STEP 5B. TAILGATE COVER

• Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)




Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.





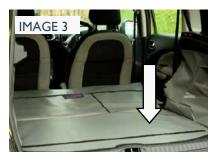





OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The "Floor extension" offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors

PLEASE REQUEST FURTHER INFORMATION AS YOU PLACE YOUR ORDER



(The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date)