

BMW 4 SERIES GRAN COUPE - 2014 to 2021

OUR REF: H0657

PACKAGING REQUIREMENTS.

BOOTLINER

- **2x 250 mm** 30mm wide self-adhesive loop fastener
- **2x 500 mm** 20mm wide self-adhesive loop fastener
- **8x** ref 121

TAILGATE COVER

- **22 x tabs** self-adhesive loop fastener



Split bootliner



REF 121



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener sticks to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary)
3. Attach the self-adhesive fastener and let them fully adhere over the next 24 hours for the best bond.

**The fastener cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*



STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Lower the Offside Net if your car has one, it will not be usable with the bootliner fitted.

STEP 2. FITTING BASE

- Place the bootliner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. **(image A)** Ensure you have a good fit, as the following steps will fix the liner in place.
- Tilt the rear seats forwards slightly to open a gap between the rear seats and the boot floor.
- Push the foam tabs sewn onto the front end of the base into the gap between the boot floor and the rear seats. Fold the seats back up trapping the foam tabs. **(Image B)**



STEP 3. FITTING THE FRONT

- **- PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fastener between the side panels and the seat panel. **(image C)**
- Loop the hook & loop fastener straps around both headrest posts. **(image D)**. Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up.
- The front panel will go up and over the rear seats up to the headrest posts. This is to help the middle panel stay in place when either side is dropped down.

REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. *(Please refer to REAR PLUS / SPLIT options on website to see detailed photo)*



STEP 4. FITTING THE SIDES & BACK

- Attach the 20mm wide self-adhesive loop fastener strips to the bottom edge of the side plastic panels just above the carpeted area as highlighted in orange. (Image E)
- Insert 4 ref:121 tabs on each side of the boot as highlighted in green (Image E). To do this peel back the rubber and slot the plastic end of the ref:121 tabs behind the boots carpeted panel. (Image F)
- Slide these ref:121 tabs up or down so that they align with the hook fastener welded onto the sides of the bootliner. (Image E&F)
- Fasten the hook fastener sewn and welded onto the top edge of the bootliner sides to the previously attached fastener strips and tabs.
- Stick the 30mm wide self-adhesive loop fastener onto the panel located on both sides of the lock at the tailgate end of the boot. Fasten the bootliner to it using the fasteners welded onto it. (Image G)



OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Bootliner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

STEP 5B. TAILGATE COVER

- Remove the tailgate cover panel, this can be replaced after the tailgate cover has been fitted



Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive fastener tabs will be stuck. (image 4)

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5C. BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the bootliner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.(image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date