

BMW MINI Mk I 2001 - March 2007

Our ref: H0254

Packing requirements

- BOOTLINER
- 2 separate side flaps
- Minimum 38 self-adhesive loop fastener tabs



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Boot liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.



PREPARATION

Remove the load cover cassette, it can be replaced later.
Unlock rear seat back rest and recline just a couple of inches.

FITTING

- Place liner into car and unfold.

FRONT

- Position the front of the liner against the back of the seats, and firmly press the hook fastener into place.
- The hook & loop fastener straps pass around the corresponding headrest posts and fasten back on to themselves.
- Relock rear seat back rest

BASE


- Attach the two ties on the front end of the base to their corresponding load securing hooks.

BACK

- At the tailgate end attach the back panel to the plastic moulding using the self-adhesive fastener pads.

SIDES

- Open the access panels to allow you to pass the elastic loops over the protruding catches along the top edge.
- Use the self-adhesive loop fastener to attach the side panels.
- The two separate flaps attach to the upper exposed face of the car side.

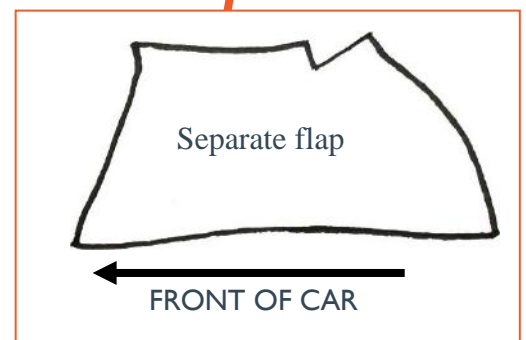

Please note the following photos are non-specific to your vehicle

BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. **Ensure you do not cut through the stitching**
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

FLOOR EXTENSION

The "Floor extension" offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.

- The **Floor extension** is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.

The max width is 148cm (see photo on left).

It will offer no protection to the rear doors

PLEASE REQUEST FURTHER INFORMATION AS YOU PLACE YOUR ORDER

(These items cannot be added at a late date)

