

## JEEP GRAND CHEROKEE - 2001 - 2005

### 3 REAR HEADRESTS

OUR REF: H0274

### PACKAGING REQUIREMENTS.

#### BOOT LINER

- 2x 630mm 20mm wide self-adhesive loop fastener
- 4x tabs self-adhesive loop fastener
- 2 x ref: 105
- 2 x own base tabs



REF: 105



OWN BASE TAB



Rear Plus boot liner



### VERY IMPORTANT PREPARATION



To ensure the self-adhesive loop fastener sticks to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

#### To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 loop fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary)
3. Attach the loop fastener and let them fully adhere over the next 24 hours for the best bond.



*\*The Hoop & loop fastener cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*



*Please note not all of the photographs are specific to your vehicle*

## STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.

## STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fastener welded to the reverse face fix directly to the carpet. **(image A)**
- Locate the two hook fastener welds at the tailgate end of the base panel. Fasten the loop fastener part of the “own base tabs” to these welds, so that the remaining part of the tab protrudes out.
- Carefully lift the floor along with the boot liner just enough to be able to wrap the tabs around and fasten to the underside with 2 of the small self-adhesive tabs.
- Replace the floor.
- You may need to unfasten the base and readjust. **(image B)**
- Locate the two slots in the base panel and the aligning screws in the plastic tailgate trim. **(image C)**
- Remove the two screws, pass through the holes in the ref: 105 fixings and then replace.
- Pass the end of the ref:105 fixing through the base panel slots and fasten. **(image D)**

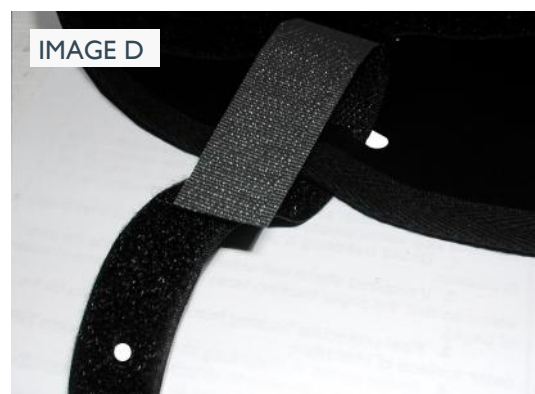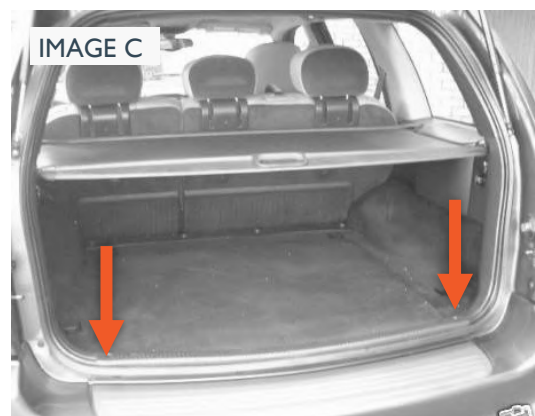

### STEP 3. FITTING THE FRONT

- - **PLUS / SPLIT VERSION ONLY** - fasten the hoop & loop fastener between the side panels and the seat panel. (image E)
- Starting with the middle headrest, loop the hoop & loop fastener straps around both headrest posts. (image F). Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the left and right headrests.

#### REAR PLUS VERSIONS

You **MUST** unfasten the hoop & loop fastener + the headrest straps before you recline the rear seat uppers. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo)



### STEP 4. FITTING THE SIDES

- Attach the **2x 630mm** 20mm wide self-adhesive loop fastener to the edge of the side plastic panels along the window sill edge (Image G)
- Fasten the hook fastener welded onto the top edge of the boot liner to the previously attached loop fastener.
- Fasten the ties to the corresponding hooks
- Use the small self-adhesive tabs to fix the back end of the sides ( arrow in Image H)





## OPTIONAL EXTRAS

*Please note the following photos are non-specific to your vehicle*

### STEP 5A. SEAT FLAP

- The Seat Flap is designed to be used in conjunction with the **Rear Plus** or **Split Option(s)**. With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 2)
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the boot liner just below the top of the rear seats. (image 1)

### STEP 5B BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 3)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.

### STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.( image 4)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors

