

## VOLVO V70 2000 – 2007

Our ref: H0313



*Please note: Liner above has an additional Bumper flap attached*



### Packing requirements

BOOT LINER

6x ref 099 – Air vent clips (*plastic tabs with hook & loop fastener attached*)


8x ref 104 – Large loop self-adhesive fastener tab (only 1/2 adhesive)

Min of 4 x small self-adhesive loop fastener pads

TAILGATE COVER

2x ref 099 – Air vent clips (*plastic tabs with hook & loop fastener attached*)

Min of 8 x small self-adhesive loop fastener pads

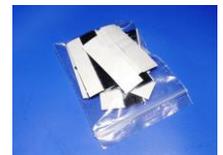

### LINER FITTING INSTRUCTIONS

- Unlock rear seat back rest and fold down.
- Place liner into car and unfold

#### BASE

- Position base of liner snugly into place.
- **PHOTO A:** At tailgate end: Lift up the false floor section and the liner base panel at the same time. Locate the hook fastener welds on the underside of the liner's base panel. To these, align and stick the "Large" loop self-adhesive fastener tabs to the wooden underside of the lift up floor.

- At seat end: The two fabric / hook fastener flaps sewn into the front seam of the base are designed to wrap around and under the carpeted wooden floor. Use the smaller self-adhesive loop fastener pads to attach to the wooden surface.

**DO NOT WRAP AROUND TOO MUCH, AS THIS WILL PULL THE BASE AWAY FROM THE TAILGATE END!**

- Re-lock the rear seat back rest.

#### FRONT

- Position the front of the liner against the back of the seats.
- **PHOTO B:** The long hook & loop fastener straps pass around each individual headrest post and fasten close back upon themselves.  
*NOTE: if desired these can be attached to the Safety Net when it is being used. The two*



PHOTO C



PHOTO D



PHOTO E



PHOTO F

## SIDES

- Position side panels snugly into place.
- At tailgate end: **PHOTO C:** (Note this photo is non-specific to your car) Attach the “Large” loop self-adhesive fastener tabs to the reverse side of the access panels, inline with the hook fastener welds on the wrong side of the liner. The section of fastener without adhesive will protrude out of the access panel, and will fasten close to the liner.
- Top edge of sides: Attach the six Air vent clips (ref:099) to the slots in the side panels:

**PHOTO D:** Locate the slots along the top edge of the liner. In line with these insert the plastic section of a ref: 099 tabs into the air vent on the side of the car.

**PHOTO E:** Ensure the right side of the hook & loop fastener faces upwards when it is hanging down.

**PHOTO F:** Pass the fastener through the slot in the side panel and fasten back on itself.

## Optional Extra – Tailgate cover

PHOTO G:

- Locate the two central slots in the liner. Insert the plastic section of the separate Air vent clip: ref 099 into the void between the glass and the door panel. Pass the fastener through the liner slot and fasten close.
- Use the self-adhesive loop fastener to attach the cover to the door plastic.



PHOTO G



## VERY IMPORTANT TAILGATE PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the Boot liner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any hook & loop fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The hook & loop fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

NOTE: the adhesive takes 72hrs to reach full adhesion – do not disturb during.