

LEXUS RX300, RX350 + RX400 2003-2009

ROW 2 Seats slid as far back to tailgate.

Our ref: H0346

Our packing Requirements:

- BOOT LINER**
12 x ref: 104: large loop fastener pads (Only part self-adhesive)
Min of 8 self-adhesive loop fastener tabs
- TAILGATE COVER**
Min of 13 self-adhesive loop fastener tabs



REF: 104




VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the Bootliner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any self-adhesive fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 72hrs to reach full adhesion – do not disturb during.

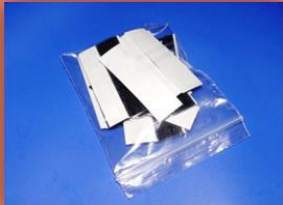

PREPARATION

Ensure the 2nd Row Seats have been slid as far back to the tailgate.

FITTING

- Remove the load space cover cassette.
- **BASE:** Position base of the liner snugly into place. Start at tailgate end. The hook fastener on the reverse side of the base panel will attach directly to the carpet.
- **FRONT PANEL:** Pass the hoop fastener straps around the headrest posts and fasten close to themselves.
- **SIDE PANELS:** Position the side panels snugly into place.
- The suckers attach to the windows.
- **Middle:** The self-adhesive section of the large loop fastener pads is designed to attach to the underside face of the plastic moulding (i.e. the runner for the load space cover). Once attached in the appropriate place (i.e. in alignment to the hook fastener welds on the reverse face of the liner) the larger portion will hang down ready to fasten close to the liner.
- At **tailgate end of sides** use the small self-adhesive loop pads to attach the liner to the plastic panel
- Replace the load space cover cassette.

Optional Extras

Please note the following photos are non-specific to your vehicle

TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

