

Jaguar X Type estate (inc.AWD)

2004-2010

Our Ref: H0348

Our packing requirements:

BOOT LINER

- 6 x refs: 099 AIR VENT CLIPS
- 4 X PVC / hook & loop fastener tabs
- 18 x self-adhesive loop fastener tabs

TAILGATE COVER


- 12 x self-adhesive loop fastener tabs



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the boot liner to the plastic / metal trim (Not the carpet), it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any hook & loop fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

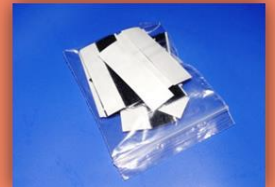

- Remove load space cover cassette
- Unlock the rear seat back rest and recline slightly.
- BASE: position base of the liner snugly into place.
 - AT seat end: The two foam filled tabs are to be pushed into the void between the boot floor and the seats. Re-lock seat back rest trapping the foam tabs in place.
- At tailgate end: Identify the four hook fastener welds on the reverse side of the liner. Lift the floor panel along with the liner enough to allow you to attach the four "PVC /hook & loop fastener tabs" (supplied separately) to the polystyrene moulding. Use the self-adhesive loop fastener to attach the tabs so that they protrude out of the floor space. When you replace the floor, the liner can now fasten close to the protruding tabs.
- FRONT PANEL: Pass the hook & loop fastener straps around the headrest posts and fasten close to the liner. The two hook fastener welds require self-adhesive loop fastener to attach to the plastic moulding.

- **SIDE PANELS:** Position the side panels snugly into place.
 - At seat end the tape loop passes over the load space cover mounting.
 - At tailgate end use the self-adhesive loop fastener to attach the liner to the plastic panels.
 - At the window / air vent sections: PLEASE refer to the following AIR VENT CLIPS.

The following photographs are non-specific to your car.

AIR VENT CLIPS.

Locate the slots along the top edge of the liner. In line with these insert one of the separate hook & loop fastener / plastic tabs ref: 099 (supplied separately) into the air vent on the side of the car. See photo A

Ensure the right side of the fastener faces upwards when it is hanging down. See photo B

Pass the hook & loop fastener through the slot in the side panel and fasten back on its self. See photo C

