

BMW 5 Series Touring 2004 - 2010

Our ref: H0368

PACKING REQUIREMENTS

BOOTLINER

- Minimum of 14 self-adhesive loop fastener tabs
- 4 x large part self-adhesive Loop fastener pads (our ref :104)

TAILGATE COVER

- Minimum 16 self-adhesive loop fastener tabs



REF: 104



NOTE: Photo shows a standard Bootliner with loop fastener sewn on the base so as to attach a bumper flap.

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.

(Note: photos are non specific to your model)

PREPARATION

- Remove load space cover cassette. It can be replaced later.
- **Unlock the rear seat uppers and fold forward a little.**

BASE


- **Photo A:** Position base of the liner snugly into place with the bound edge sitting to the highlighted ridge.
- **Photo B:** At the tailgate end of the base the hook fastener on the reverse side of the liner will require self-adhesive loop fastener pads (supplied separately) to attach liner to the flat plastic area.
- **Photo C:** At the seat end of base locate the two foam filled tabs and push them down into the void between the floor and the seat uppers. You may find this easier working from the passenger doors. Lock the rear seat uppers trapping in the foam tabs.
- Attach ties to relevant luggage hooks.

FRONT PANEL

- Pass the hook & loop fastener straps around the headrest posts and fasten close to the liner.
- Unlock the central headrest/armrest so as to attach the relevant self-adhesive fastener pads to the plastic panel. This will keep the middle section of the liner up.

REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS**

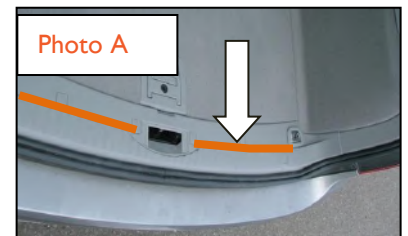

SIDES

- Unlock the access panels.

Photo D

- **ELASTIC LOOPS**


Locate the large elastic loops attached to the reverse face of the liner sides. Pass them over the top of the access panels and slide down.

- **LARGE FASTENER TABS**

Attach the Ref 104's to the reverse side of the access panels, in line with the hook fastener welds on the wrong side of the liner. The section of fastener without adhesive will protrude out of the access panel. The liner can be fastened closed to this fastener.

- **FRONT HALF OF SIDES**

Use the smaller fastener tabs to attach the liner to the plastic.

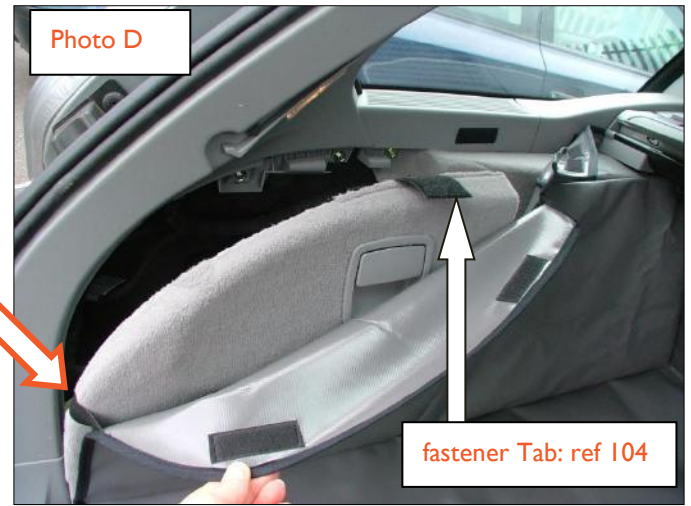

OPTIONAL EXTRAS

Please note these photos are non-specific to your car.

REAR DOOR COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



BUMPER FLAP

- Fit Boot Liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



SEAT FLAP

- The Seat Flap is designed to be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.

