

## SAAB 9-3 SPORTSWAGON

2005on

Our pat.ref: H0403

Our Packing Requirements:

- BOOTLINER**  
6 x ref: 107 black plastic (J profile) loop fastener clips  
5 x own pvc loop + hook fastener tabs  
Cut lengths of self-adhesive loop fastener: 1 @ 59cm  
and 1 @ 47cm  
Pack of self-adhesive loop fastener tabs (min x 11 pcs)
- TAILGATE COVER**  
Pack of self-adhesive loop fastener tabs (min x 15pcs)



### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

**NOTE:** the adhesive takes 72hrs to reach full adhesion – do not touch during.




### PREPARATION

- Remove load space cover cassette. Unlock the rear seat uppers and fold forward a little.

### FITTING BASE

- Position base of the liner snugly into place.
- *Photo A (Please note this photo is nonspecific to your vehicle - your tabs will be set further apart)*

At the seat end of base locate the two foam filled tabs and push them down into the void between the floor and the seat uppers. Lock the rear seat uppers trapping in the foam tabs.

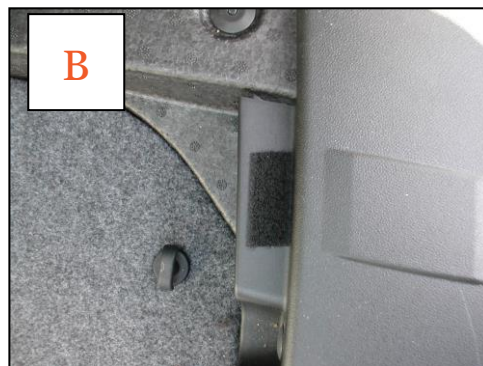



## BASE cont.

- **Photo B** - At tailgate end of base: Locate the five hook fastener welds on the reverse side of the liner. Attach the five pvc fastener tabs (supplied separately) to the floors inner moulding, in line with the liner's hook fastener welds. Use the self-adhesive loop fastener pads (supplied separately.)
- **Photo C** (*Please note photo is non specific to your vehicle*) The tabs will protrude out of the floor panel when it is replaced, allowing the liner to be fasteners closed to them.

## FRONT PANEL

- Pass the hook & loop fastener straps around the headrest posts and fasten close to the liner. The excess fastener may be trimmed.

## SIDES

- Position sides snugly into place.
- Along the top edge of the liner sides there is hook fastener on the reverse face. In line with this fastener attach the relevant self-adhesive loop fastener strips and tabs to the car's plastic trim. (Supplied separately)

## TAILGATE END OF SIDES

- Locate the hook fastener welds along the tailgate edge of the sides.
- **Photo D** - Pull back the rubber seal to allow you to slide on the black plastic (J profile) loop fastener clips. Slide onto the carpeted panel from the top edge as shown in
- **Photo E** - Relocate them to align with the fastener on the liner, and fasten close.

## OPTIONAL EXTRA

### TAILGATE COVER

**Photo F** - Shows the tailgate cover attached. Use the self adhesive fastener pads to attach the cover to the corresponding metal or plastic