

FORD S-MAX 2006-2014

Our ref: H0412



Packing requirements

BOOTLINER

- Minimum of 26 self-adhesive loop fastener pads
2 x Ref: 127 fastener tabs (part self-adhesive)

REAR DOOR COVER

- Minimum of 23 self-adhesive loop fastener tabs

PLEASE NOTE - Photo Shows a Rear Plus Liner




VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any self-adhesive pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.


Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion, do not touch during.

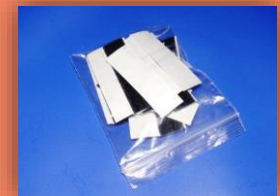

PREPARATION

- Slide the 2nd row of seats as far back to the tailgate, and fold the 3rd row flat into the floor.
- Remove the load cover cassette. It can be replaced later if you requested cut outs.
- PHOTO A: Using the 2 ref: 127 tabs fix the row 3 seats belts as indicated.
- Unfold the Hatchbag and place the liner so that the base fits snugly into position. The panel with the Hatchbag label sits against the back of the rear seat.

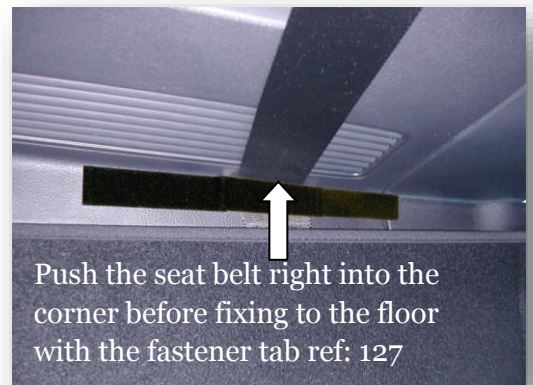

Push the seat belt right into the corner before fixing to the floor with the fastener tab ref: 127

FITTING

BASE

- Hook fastener welds attach directly to the carpet.



FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten close back onto themselves.



REAR PLUS VERSIONS

- YOU MUST UNFASTEN THE HOOK & LOOP FASTENER + THE HEADREST STRAPS BEFORE YOU FOLD THE REAR SEAT UPPERS (Please refer to REAR PLUS options on website to see detailed photo's)

SEAT BELT

- The liner is to be fastened closed around the seats belts, allowing them to protrude out of the liner.




SIDES

- Carefully position the side panels snugly into place.
- Use the self-adhesive loop fasteners to attach the base to the tailgate plate.



TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

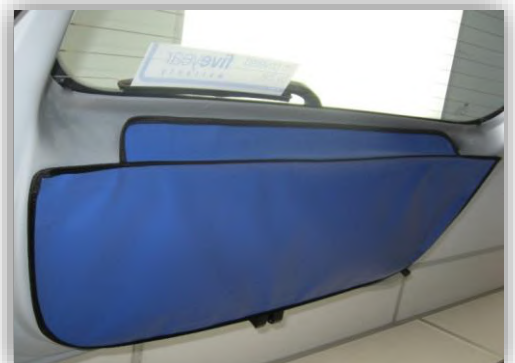



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the Rear Plus Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.