

Peugeot 407 SW (Estate)

Yr 2004 - 2011

Patt.ref: HO416 (suits all versions)

Packing Requirements:

- BOOT LINER
3 x fabric tabs with loop and hook fastener attached
(1 large and 2 small)
Minimum of 5 self-adhesive loop fastener tabs
- TAILGATE COVER
Requires no additional fixings



NOTE: liner photo shows slots in base panels; this is the "Net removed + dog guard" version liner.



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the boot liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any hook & loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.
NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.

FITTING

BASE

- Position base of the liner snugly into place.
- At the seat end of base locate the two ties and pass them down into the void between the floor and the seat uppers.
- See photo A - Access the second row seat base from the passenger door. Lift up the base and tie these two ties to the 'D' ring section of the seat belt catch mechanism.

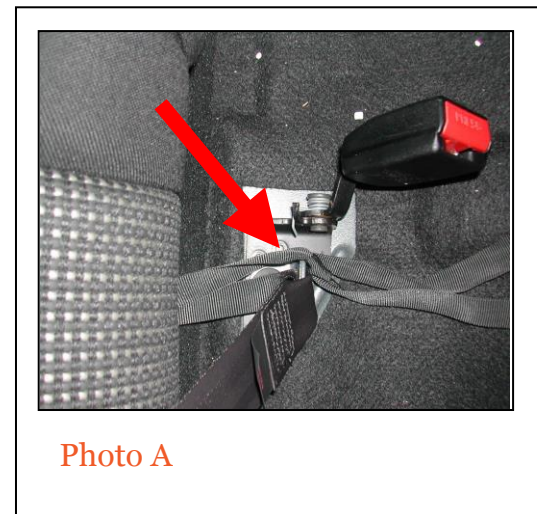


Photo A

- See photo B - At tailgate end of base: Locate the 3 groups of hook fastener welds on the reverse side of the liner at the tailgate end.
- Lift the false floor. Attach the corresponding sized fabric tabs with loop and hook fastener attached (1 large and 2 small) to the floors inner moulding. Use the self-adhesive loop fastener pads (supplied separately)
- See photo C - The tabs will protrude out of the floor panel, allowing the liner to be fasten closed to them.



Photo B

FRONT PANEL

For liners designed with the net cassette removed.

- Pass the hook & loop fastener straps around the headrest posts and fasten close to the liner.

For liners designed with the net cassette left in.

See photo D.

- Remove the three headrests on the rear seats
- Detach the large flap from the boot liner front panel.
- Reposition the headrests posts through the flap.
- Feed the shaped edge of the flap through the void between the seat back and the net cassette. When positioned correctly the front of the liner can be fasten closed to this flap.



Photo C

SIDES

- Sides attach directly to the carpet. The tape edge sits just above the carpet edge.
- The tailgate end of the side panels needs teasing into place. There will be a moderate amount of creasing; however all the carpet will be protected here. See photo below.



Photo D

OPTIONAL EXTRAS

TAILGATE COVER

- The hook fastener attaches directly to the carpet.

