

HONDA CRV 2007 - 2012

Our ref: Ho418

Packing requirements:

- Boot liner- Minimum of 32 self-adhesive loop fastener tabs
- Tailgate Cover - Minimum of 20 self-adhesive loop fastener tabs




PLEASE NOTE - Photo Shows a Rear Plus Liner prepared for additional Bumper flap and Seat flap

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

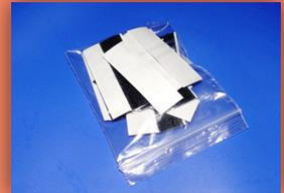

FITTING NOTES



The liner has been designed with the 2nd tier false floor (See photo A) stored at the lowest level. (See photo B) The 2nd row seats are to be slid as far back to the tailgate as possible.

FITTING

- Remove the load cover cassette.
- Position the base of the liner snugly into place. The hook fastener welds attach directly to the carpet.
- Pass the hook & loop fastener straps around the headrest posts and fasten close to the liner. (*Split Seat version* - The hook fastener welds attach directly to the carpeted panels on seat backs.)
- Position the side panels snugly into place. Use the self-adhesive loop fasteners to attach the liner to the plastic panels.