

HONDA CIVIC 5Door

2006 - 2011

Our ref: H0427

Packing requirements

BOOTLINER
Minimum of 8 self-adhesive loop fastener tabs


REAR DOOR COVER
Minimum of 18 self-adhesive loop fastener tabs



Photo shows are Rear Plus version Bootliner

PREPARATION

- Ensure you entire floor is level, you can NOT utilize the split level floor with this version
- Remove the load cover. It can be replaced later.
- Fold down the floor panel's vinyl handle so it sits as flat as possible - SEE PHOTO A
- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.

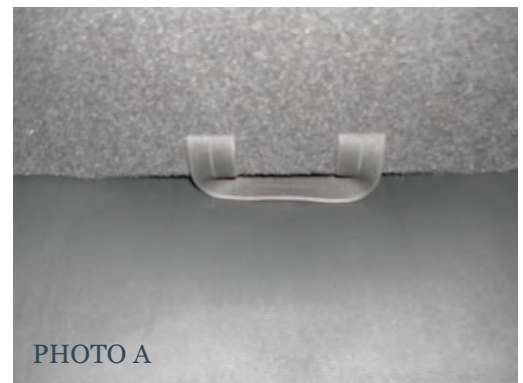

VERY IMPORTANT PREPARATION


To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.



NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

BASE

- Position the base snugly into place.
- The hook fastener welds will attach directly to the carpet.

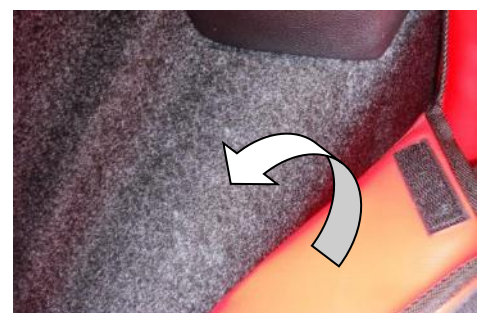

Please note photos are non specific to your vehicle.

FITTING FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.
- Any fastener welds on the reverse side of the panel will attach directly to the carpet.



NOTE: REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS (Please refer to REAR PLUS options on website to see detailed photo')**

SIDES

- Position the side panels snugly into place.
- Pass the strap through the appropriate slots - **SEE PHOTO B.**
- The hook fasteners welded to the reverse face of the sides will attach directly to the carpeted section of the panels.


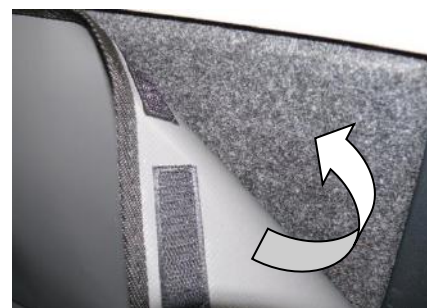


PHOTO B

BACK

- Carefully position the back panel snugly into place.
- Use the self-adhesive loop fastener tabs to attach the rear end of the liner to the plastic trim.

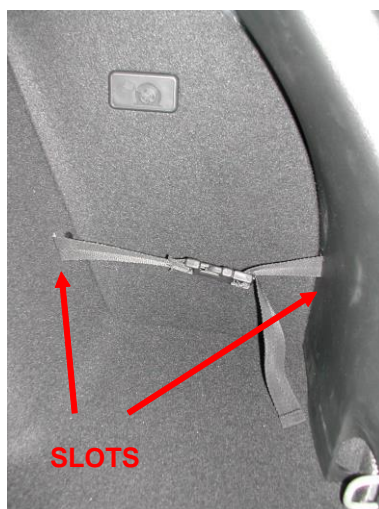

Optional extras

TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

Please note this photo is non-specific to your vehicle



FREQUENT USE KIT

If you intend to frequently remove/fit the Bootliner from/to your vehicle please note that the carpet may “fluff” up – we have an alternative “Frequent use fitting kit” – ask our sales team or see our on-line “factory shop”.



Please note the following photos are non-specific to your vehicle

BUMPER FLAP



- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

