

PEUGEOT 207 Hatch 2006 on

OUR PATT REF: H0436




Our Packing instructions



6 x self-adhesive loop fastener

Photo A

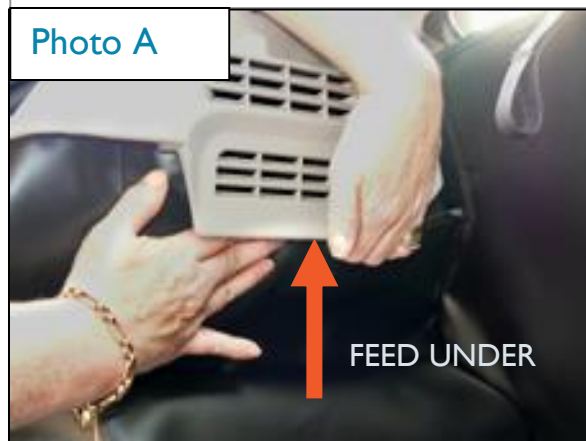

IMPORTANT PREPARATION

To ensure a good bond; when using the self-adhesive loop fastener to attach the boot liner to the plastic / metal trim (**Not** the carpet), it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover " made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

Remove the load cover before fitting the liner. It can be replaced once you have completed.

FITTING

- Place the boot liner into the car and unfold. The panel with the Hatchbag label goes towards the front of the car
- Position the base of the liner snugly into place.
- Place the front panel of the liner up against the back of the rear seat. Fasten the 6 hook & loop fastener straps around the corresponding headrest posts and fasten close back onto themselves.
- Position the side panels snugly into place. The hook fastener strips will attach directly to the hook & loop fastener friendly carpet. (Ensure the carpet is clean and free of Dog hair)
- **Photo A** - The top edges of the side panels need to be fed under the plastic mouldings as illustrated.
- Use the self-adhesive loop fastener to attach the back of the liner to the plastic tailgate.