


SKODA FABIA 2 + FABIA 3 ESTATE

2008on

OUR REF: Ho445

PACKING REQUIREMENTS

- BOOT LINER**
Min x 20 self-adhesive loop fastener pads
3 cut lengths of self-adhesive loop fastener:
1 @ 270mm
1 @ 330mm and
1 @ 780mm long
- REAR DOOR COVER**
Min x 19 self-adhesive loop fastener pads

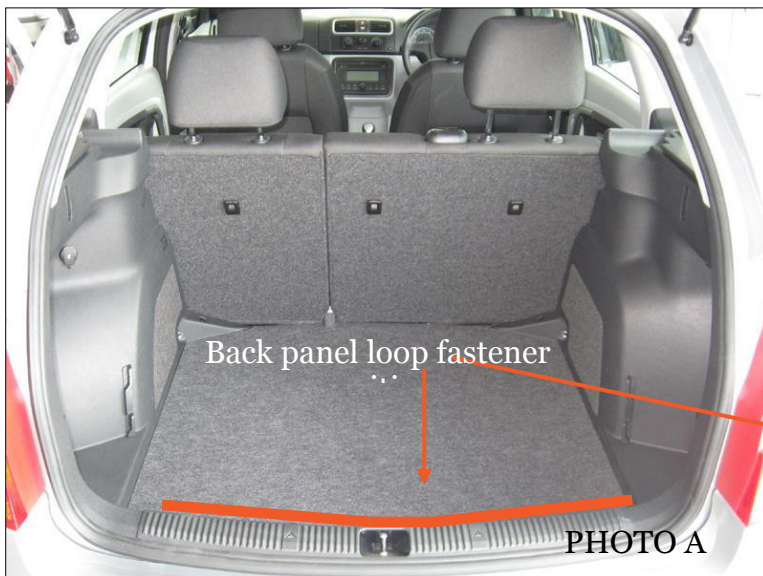

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the boot liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

Unfortunately, we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.



PREPARATION

Remove the load cover before fitting the liner. It can be replaced once you have completed.

FITTING

BASE PANEL

Place the Boot Liner into the car and unfold. The panel with the Hatchbag label goes towards the front of the car. Position the base of the liner snugly into place. The hook fastener strips will attach directly to the hook fastener friendly carpet. (Ensure the carpet is clean and free of Dog hair)



FRONT PANEL (back of seats!)

Fasten the 6 hook & loop fastener straps around the corresponding headrest posts and fasten close back onto themselves. The hook fastener welds on the reverse side of the liner attach directly to the carpet on the back of the seats.



REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENER + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS**

(Please refer to REAR PLUS options on website to see detailed photos)

BACK PANEL + SIDES

Position the side panels snugly into place. Use the self-adhesive loop fastener pads to attach the liner to the plastic.

See Photo A: Use the longest cut length of self-adhesive loop fastener to attach the back panel of the liner.

See Photo B: Attach the two shorter lengths of self-adhesive loop fastener along the inside face of the plastic pocket panels.



PHOTO B

Please note these photos are non-specific to your car.

OPTIONAL EXTRAS

SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the Rear Plus / Split options. With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts



BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

