

BMW X5 4x4 2007-2018

7 seats – 3rd Row folded and not usable

OUR REF: H0446

- Boot Liner packing instructions
2 x 430mm long cut lengths of 20mm wide self-adhesive loop fastener
16 x self-adhesive loop fastener pads
- Tailgate Cover
50 x self-adhesive loop fastener pads
(UPPER x 25 + LOWER x 25)



Photo A

IMPORTANT PREPARATION

To ensure a good bond: when using the self-adhesive hook & loop fasteners to attach the Boot liner to the plastic (NOT the carpet), it is most important to remove the silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone.

Before applying any self-adhesive fastener pads, the surface MUST be thoroughly cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone) We recommend “Intensive Tar Remover” made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

NOTE: The adhesive takes 24hrs to reach full adhesion – do not disturb during this time. In cold weather we advise you fit the liner in a warm environment (i.e. run the car till the interior is warm)

PREPARATION

- Remove the load space cover cassette. This can be replaced carefully once the Boot liner has been fitted.
- Ensure the third-row seats are folded flat into the floor.
- Slide the 2nd row seats slightly forward to the front of the car.

FITTING

BASE:

- **Photo A.** Starting at the tailgate end fit the pocket over the drop down rear tailgate.
- Position the base of the liner snugly into place.
- **Photo B.** Attach the two ties to the corresponding 3rd row headrest posts.
- Carefully slide the 2nd row seats as far back to the tailgate as possible.
- Ensure the Seat Uppers are set to the middle rake.

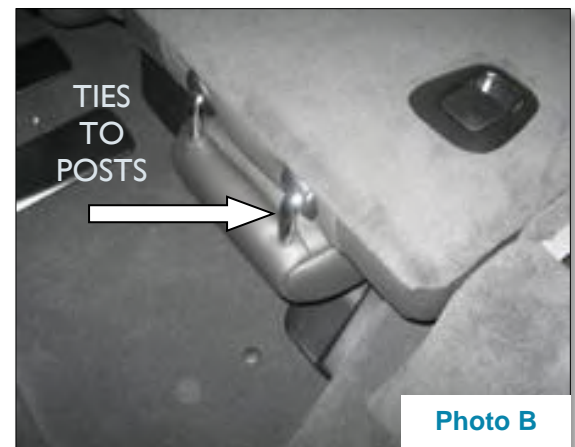


Photo B

FRONT PANEL:

- Pass the fastener straps around the headrest posts and fasten close to the liner.
- Use the self-adhesive loop fasteners to attach the hook fastener to the plastic moldings on the seats.

REAR PLUS

Please note on REAR PLUS version liners – you will need to unfasten the headrest straps before you attempt to fold your 2nd row seats flat!

SIDE PANELS

- Position the side panels snugly into place.
- Use the self-adhesive loop fastener to attach the sides to the plastic panels.
- Photo C. Attach the two hook fastener tabs to the plastic moldings that take the load cover cassette, using the self-adhesive loop fastener pads – trim excess.

OPTIONAL EXTRAS

TAILGATE COVER

Photo D+E Use the self-adhesive loop fastener to attach the cover to the plastic panels. (Applies to both upper and lower cover)

