



AUDI Q7 2006on

Our ref: H0452

Packing requirements:

- BOOTLINER
 - Minimum of 16 self-adhesive loop fastener tabs
 - 2 x 260mm cut lengths of 20mm wide loop fastener
 - 6 x own hook/loop fastener tabs
 - 2 x ref 117
- TAILGATE COVER
 - Minimum of 19 self-adhesive loop fastener tabs




hook/loop fastener tabs



REF: 117

PREPARATION

- Remove the load cover cassette; it can be replaced later if you have requested the “Load Cover Cassette left IN” version.
- **Photo A;** If your 3rd row seatbelts cannot be unfastened from the floor then trap them with the 2 ref 117's: The yellow strip represents the fastener tab.
- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.

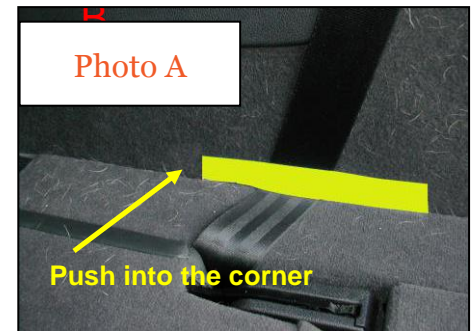



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener tabs, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not Touch during.

BASE

- Position the base of the liner snugly into place. *PLEASE NOTE:* Start at the tailgate end, it is the same size as the boot base and does not cover the small void at the front.
- Locate the 6 hook fastener welds on the reverse face of the base panel, at the tailgate end.
- **Photo B:** Attach the 6 hook/loop fastener tabs to the vertical face of the metal tailgate plate. Lift the false floor to access this section. THEIR POSITION MUST CORRESPOND WITH THE HOOK WELDS ON THE LINER. Once in place and the boot floor repositioned, the liner can be fastened to the protruding section of the tab (**See Photo C**).
- Fasten the 2 ties (located at the front) to the headrests of the folded 3rd row seats.

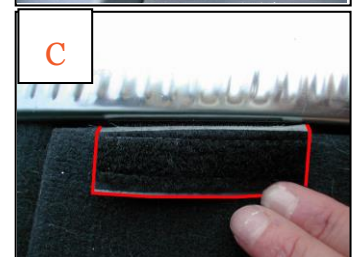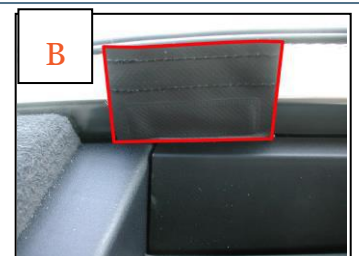

FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.

REAR PLUS VERSIONS

- YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS + THE HEADREST STRAPS BEFORE YOU FOLD THE REAR SEAT UPPERS Please refer to REAR PLUS options on website to see detailed photo's



SIDES

- Carefully position the side panels snugly into place.
- Use the self-adhesive loop fastener supplied to attach the sides to the plastic window-sill panels.
- The hook fasteners attached to the tailgate end of the sides attach directly to the carpet.

Use self-adhesive loop fastener



Liner attaches directly to the carpet



- If you have the 3rd row seatbelts that cannot be unfastened from the floor pass the slit/fasten around them

3rd row seatbelts "unfastening type"



OPTIONAL EXTRAS

TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

Please note not all of the photographs are specific to your vehicle




BUMPER FLAP

- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



SEAT FLAP

- The Seat Flap can be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over the exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.

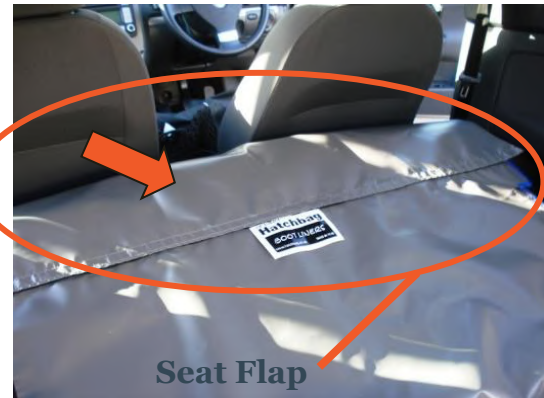

FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.

- The **Floor extension** is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.

The max width is 148cm (see photo on left).

It will offer no protection to the rear doors



PLEASE REQUEST FURTHER INFORMATION
AS YOU PLACE YOUR ORDER

(This item cannot be added at a late date)