

MINI CLUBMAN 2007on

Our ref: H0453

PACKING REQUIREMENTS

BOOT LINER

“RAISED” + “LOW FLOOR” BOOT LINER
Minimum of 9 self-adhesive loop fastener tabs

REAR DOOR COVER

Minimum of 21 self-adhesive loop fastener tabs




Please note; This photo shows the “LOWERED” Floor version

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the boot liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion, do not disturb during.

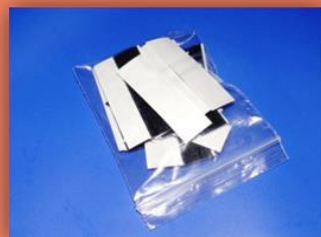

PREPARATION

- Remove the load cover. It may be replaced later
- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.
- Ensure you have removed or positioned the False Floor to suit the boot liner you have purchased.

These photos are non-specific to your vehicle

FITTING

BASE

- Position the base snugly into place. Start at the tailgate end. The hook fastener welds will attach directly to the carpet.
- Use the self-adhesive loop fastener to attach the back panel to the tailgate plate.
- Attach the self-adhesive loop fastener tabs to the hook fastener on the liner. Peel off protective backing, reposition panel and apply **FIRM** pressure at tab location points to ensure maximum adhesion to structure.



FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.
- The hook fastener welded to the reverse face of the liner will attach directly to the carpet on the back of the seats.



REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENER + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS** (Please refer to REAR PLUS options on website to see detailed photo's)

SIDES

- Carefully position the side panels snugly into place.
- The hook fastener will attach directly to the carpet.

OPTIONAL EXTRAS

FREQUENT USE KIT

If you frequently remove/fit your boot liner from/to your vehicle please note that the carpet on the floor and seat back will “fluff” up – we have an alternative “Frequent Use Fitting Kit” The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop.



REAR SEAT FLAP

- Please note the **standard** rear seat flap for your vehicle is as **Photo A:** It does not sit over the headrests as it would restrict your rear view.
OR
- If you have ordered a REAR PLUS and require a seat flap to extend the coverage of the boot liner when the rear seats are folded - see **Photo B** YOU WILL BE REQUIRED TO E-MAIL us with a **special request** or tell us in “Additional details” when placing your order



Photo A: **STANDARD** seat flap



OR

Photo B: **SPECIAL REQUEST** seat flap

TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the covers to the plastic trim.

