

Citroen c-crosser 2007 to 2012

WITHOUT ROCKFORD SPEAKER

Our ref: H0467-C-SPKNO

2 Patterns: Both – 3rd Row folded Either 2nd Row Slid as far back to the tailgate OR 2nd row slid as for forward



Please note this picture shows a Rear plus liner with a split front

- Packing requirements
- BOOTLINER
 - Minimum of 16 self-adhesive loop fastener tabs
 - 2 x 190mm cut lengths of self-adhesive loop fastener.
- REAR DOOR COVER
 - Minimum of 19 self-adhesive loop fastener tabs

IMPORTANT PREPARATION


To ensure a good bond: when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic (NOT the carpet), it is most important to remove the silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone.

Before applying any self-adhesive fastener pads, the surface MUST be thoroughly cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone) We recommend “Intensive Tar Remover” made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

NOTE: The adhesive takes 24hrs to reach full adhesion – do not disturb during this time. In cold weather we advise you fit the liner in a warm environment (i.e. run the car till the interior is warm)

PREPERATION

- Remove the load space cover cassette
- **Photo A:** Secure the 3rd row seat belts as shown.

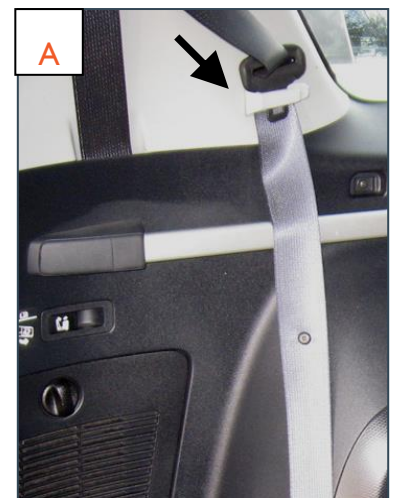

BASE PANEL

- **Photo B:** Pass the pocket over the tailgate hinge flap.
- Position the base of the liner snugly into place. The fasteners will attach directly to the carpet.
- Fasten the 2 ties to the corresponding 3rd row seat belt “D” rings.



FRONT PANEL

- Pass the hook fastener straps around the headrest posts and fasten close to the liner.

SIDE PANELS

- **Photo C:** Position the side panels snugly into place and fasten all four ties to the chrome bars.
- Use the self-adhesive fasteners to attach to the plastic.
- **Photo D:** Should you wish to relocate the load cover cassette: You can either drop down the window sill flap to expose the recess for the cover. OR you can carefully cut a hole in the PVC fabric: **DO NOT cut through the Black tape/black tape seams.**



OPTIONAL EXTRAS

Rear Plus version liners – you will need to unfasten the headrest straps before you attempt to fold your 2nd row seats flat!

Rear Door Cover: Use the self-adhesive loop fasteners supplied to attach the sides to the plastic panels.

