

## Mitsubishi Outlander 2007-2012

WITH ROCKFORD SPEAKER

2 PATTERNS: BOTH: 3<sup>rd</sup> row folded

EITHER 2<sup>nd</sup> row slid as far back to the tailgate

OR 2<sup>nd</sup> row slid as far forward

Our ref: H0467 SPK

- Packing requirements
- BOOTLINER
  - 2 x webbing/fastener straps (our ref 119)
  - Minimum of 27 self-adhesive loop fastener tabs
  - 2 x 145mm cut lengths of self-adhesive loop fastener.
- REAR DOOR COVER
  - Minimum of 19 self-adhesive loop fastener tabs

Please note this photo shows a Rear Plus with split seat version liner





### IMPORTANT PREPARATION

To ensure a good bond: when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic (NOT the carpet), it is most important to remove the silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone.

Before applying any self-adhesive fasteners pads, the surface MUST be thoroughly cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone) We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

NOTE: The adhesive takes 24hrs to reach full adhesion – do not disturb during this time. In cold weather we advise you fit the liner in a warm environment (i.e. run the car till the interior is warm)

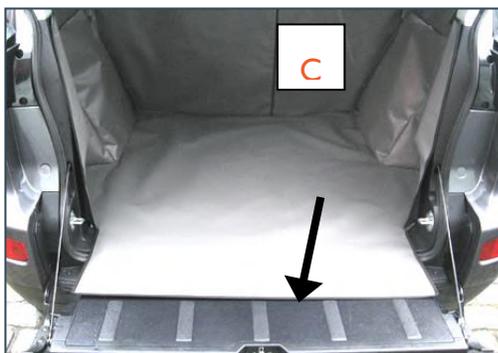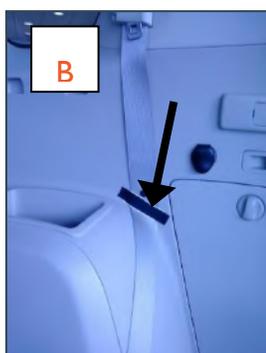

#### PREPARATION

- Remove the load space cover cassette
- **Photo A:** Secure the 3<sup>rd</sup> row seat belts as shown. **Photo B:** Using the 2 webbing / self adhesive fastener straps, fix the seat belts flush to the side, just above the wheel arches as shown.

#### BASE PANEL

- **Photo C:** Pass the pocket over the tailgate hinge flap. Position the base of the liner snugly into place. The hook fasteners will attach directly to the carpet, except near to the speaker: use the self-adhesive loop fasteners to fix.
- Fasten the 2 ties to the corresponding 3<sup>rd</sup> row seat belt "D" rings.

#### FRONT PANEL

- Pass the hook & loop fastener straps around the headrest posts and fasten close to the liner.

#### SIDE PANELS

- Position the side panels snugly into place. Should your vehicle have the chrome bars: fasten the liner behind them.
- Use the self-adhesive fasteners to attach to the plastic.
- Should you wish to relocate the load cover cassette: You can carefully cut a hole in the PVC fabric. Ensure you DO NOT cut through the black tape/black tape seams.

#### OPTIONAL EXTRAS

Rear Plus version liners – you will need to unfasten the headrest straps before you attempt to fold your 2<sup>nd</sup> row seats flat!

Rear Door Cover: Use the self-adhesive loop fasteners supplied to attach the sides to the plastic panels.