

PEUGEOT 4007 - 2007on

WITH ROCKFORD SPEAKER

2 versions BOTH: 3rd row folded

EITHER 2nd row slid as far back to the tailgate

OR 2nd row slid as far forward

Our ref: H0467-P-SPK

Packing requirements

BOOT LINER

- 2 x webbing/loop fastener straps (our ref 119)
- Minimum of 27 self-adhesive loop fastener tabs
- 2 x 145mm cut lengths of self-adhesive loop fastener.

REAR DOOR COVER

- Minimum of 19 self-adhesive loop fastener tabs

Please note this photo shows a Rear Plus with split seat version liner





IMPORTANT PREPARATION

To ensure a good bond: when using the self-adhesive loop fastener to attach the boot liner to the plastic (NOT the carpet), it is most important to remove the silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone.

Before applying any loop fastener pads, the surface MUST be thoroughly cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone) We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

NOTE: The adhesive takes 24hrs to reach full adhesion – do not disturb during this time. In cold weather we advise you fit the liner in a warm environment (i.e. run the car till the interior is warm)

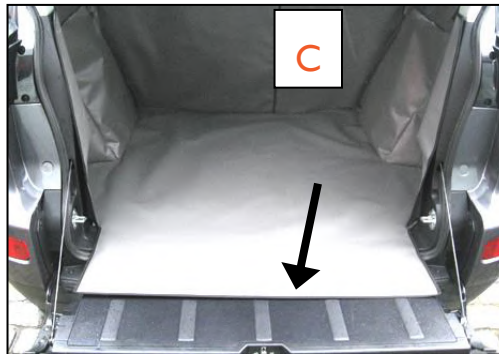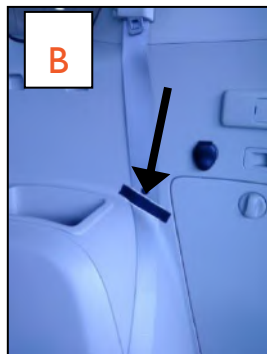

PREPARATION

- Remove the load space cover cassette
- **Photo A:** Secure the 3rd row seat belts as shown. **Photo B:** Using the 2 webbing / self-adhesive loop fastener straps, fix the seat belts flush to the side, just above the wheel arches as shown.

BASE PANEL

- **Photo C:** Pass the pocket over the tailgate hinge flap. Position the base of the liner snugly into place. The hook fastener will attach directly to the carpet, except near to the speaker: use the self-adhesive loop fastener to fix.
- Fasten the 2 ties to the corresponding 3rd row seat belt "D" rings.

FRONT PANEL

- Pass the hook & loop fastener straps around the headrest posts and fasten close to the liner.

SIDE PANELS

- Position the side panels snugly into place. Should your vehicle have the chrome bars: fasten close the liner behind them.
- Use the self-adhesive loop fastener to attach to the plastic.
- Should you wish to relocate the load cover cassette: You can carefully cut a hole in the PVC fabric. Ensure you **DO NOT** cut through the black tape/black tape seams.

OPTIONAL EXTRAS

Rear Plus version liners – you will need to unfasten the headrest hook & loop fastener straps before you attempt to fold your 2nd row seats flat!

Rear Door Cover: Use the self-adhesive loop fastener supplied to attach the sides to the plastic panels.