

PEUGEOT 4007 - 2007on

WITHOUT ROCKFORD SPEAKER

2 versions BOTH: 3rd row folded
EITHER 2nd row slid as far back to the tailgate
OR 2nd row slid as far forward

Our ref: H0467-P-SPKNO

Packing requirements

BOOT LINER

- Minimum of 16 self-adhesive loop fastener tabs
2 x 190mm cut lengths of self-adhesive loop fastener.

REAR DOOR COVER

- Minimum of 19 self-adhesive loop fastener tabs

Please note this picture shows a Rear plus liner with a split front






IMPORTANT PREPARATION

To ensure a good bond: when using the self-adhesive loop fastener to attach the boot liner to the plastic (NOT the carpet), it is most important to remove the silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone.

Before applying any loop fastener pads, the surface MUST be thoroughly cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone) We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

NOTE: The adhesive takes 24hrs to reach full adhesion – do not disturb during this time. In cold weather we

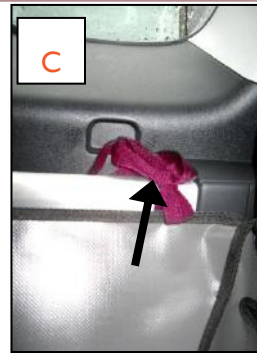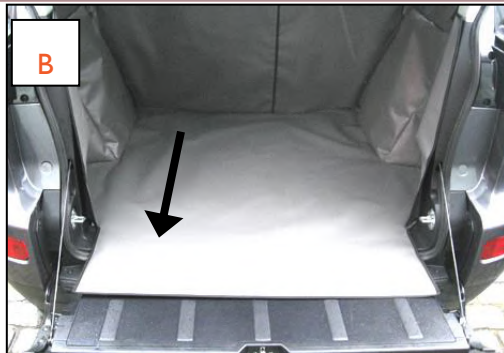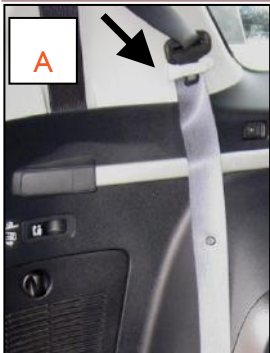

PREPERATION

- Remove the load space cover cassette
- **Photo A:** Secure the 3rd row seat belts as shown.

BASE PANEL

- **Photo B:** Pass the pocket over the tailgate hinge flap.
- Position the base of the liner snugly into place. The hook fastener will attach directly to the carpet.
- Fasten the 2 ties to the corresponding 3rd row seat belt "D" rings.

FRONT PANEL

- Pass the hook & loop fastener straps around the headrest posts and fasten close to the liner.

SIDE PANELS

- **Photo C:** Position the side panels snugly into place, and fasten all four ties to the chrome bars.
- Use the self-adhesive loop fastener to attach to the plastic.
- **Photo D:** Should you wish to relocate the load cover cassette: You can either drop down the window sill flap to expose the recess for the cover. OR you can carefully cut a hole in the PVC fabric: DO NOT cut through the Black tape/black tape seams.

OPTIONAL EXTRAS

Rear Plus version liners – you will need to unfasten the headrest hook & loop fastener straps before you attempt to fold your 2nd row seats flat!

Rear Door Cover: Use the self-adhesive loop fastener supplied to attach the sides to the plastic panels.