

## Volvo V70 + XC70 Estate - 2007-2010 + 2010 Facelift

SUITS NET CASSETTE IN OR REMOVED

OUR REF: H0478

### PACKAGING REQUIREMENTS.

#### BOOT LINER

- 2x tabs self-adhesive loop fastener
- 2x 940mm 30mm wide self-adhesive loop fastener
- 6 x ref: 121 (plastic + loop fastener)
- 8 x ref: 104



Photo shows "net cassette in"



REF:121



REF:104



### VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

#### To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.



*\*The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*


*Please note not all of the photographs are specific to your vehicle*

## STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.

## STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges
- Locate the four hook fastener strips on the reverse side of the liner at the tailgate end.
- Attach 2 x REF:104 tabs to each of these 4 hook fastener strips. The self-adhesive part will protrude beyond the liner. Carefully lift up the false floor with the base panel taking care not to let it shift, peel off the backing and stick the tabs to the under face of the floor. (image A)
- Unlock and tilt the rear seat uppers forward a little to push the two foam tabs down into the void between the rear seat and the boot floor taking care not to skew the base. (image B)
- Re-lock the rear seat uppers.

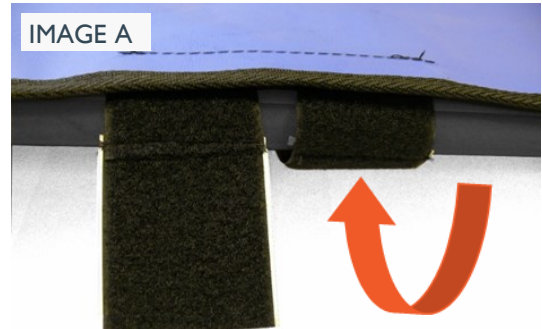

## STEP 3A. FITTING THE FRONT


**NET CASSETTE REMOVED VERSIONS ONLY**  
( Net cassette inserted - skip to step 3B)

- Attach the separate upper segment of the front panel ( the piece/pieces with the elastic straps sewn into the top edge) to the front panel of the boot liner. The loop fastener will attach directly to the hook fastener sewn onto the reverse side of the front panel ( *It may already be attached*) Fasten the elastic straps around the headrest posts. (image C)

### REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (‘Please refer to REAR PLUS / SPLIT options on website to see detailed photo’)

- Jump to step 4

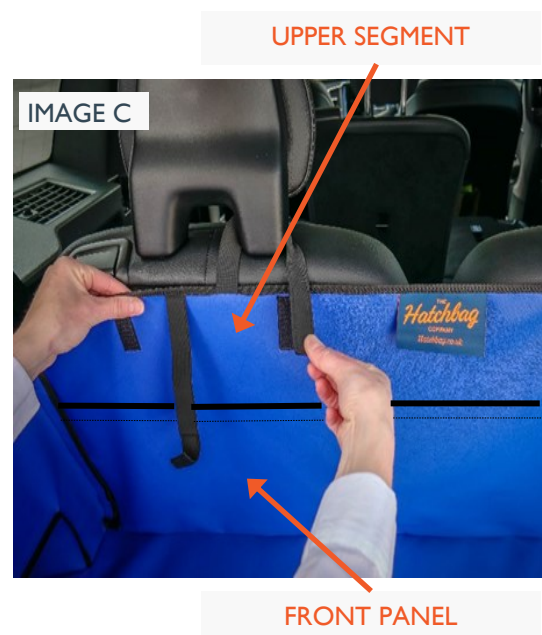

## STEP 3B.



### NET CASSETTE INSERTED VERSIONS ONLY

- Unfasten and remove the top portion of the covers front panel ( the part with the elastic headrest straps)
- Pass the loop fastener end of the separate single large foam filled tab down into the void behind the net cassette and the rear seat upper.
- **SPLIT FRONT VERSION LINERS:** you will have 3 of these foam filled tabs. The largest of the 3 sits in the middle of the 2 smaller.
- The loop fastener should now be visible below the net cassette.
- The front panel of the liner will attach to this loop fastener.

### REAR PLUS VERSIONS


You **MUST** unfasten the hook & loop fastener before you recline the rear seat uppers. ('Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo')

Please note: this photo is non-specific to your car.

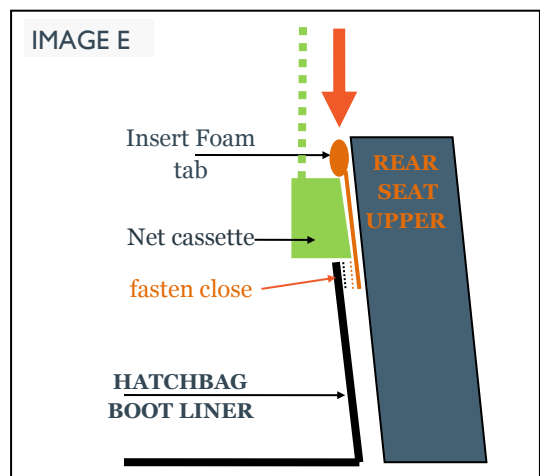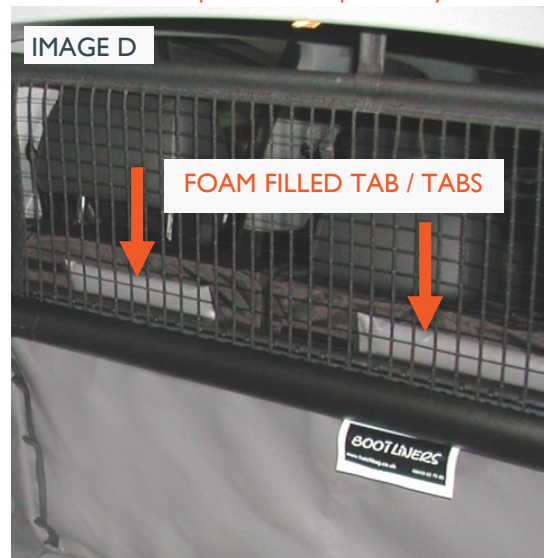

## STEP 4. FITTING THE SIDES

- Attach the 2 x 940mm 30mm wide self-adhesive loop fastener to the bottom edge of the side plastic panels just above the carpeted area. (Green highlight - Image F)
- Fasten the hook fastener strip sewn onto the top edge of the boot liner to the previously attached loop fastener.
- Insert 3 ref:121 fastener tabs on each side of the tailgate end of the boot. To do this peel back the rubber and slot the plastic end of the fastener tabs behind the boots carpeted panel (Image G)
- Slide these fastener tabs up or down so that they align with the hook fastener welded onto the rear sides of the boot liner. (Image H)
- Repeat on opposite, and fasten the side panel to the tabs.

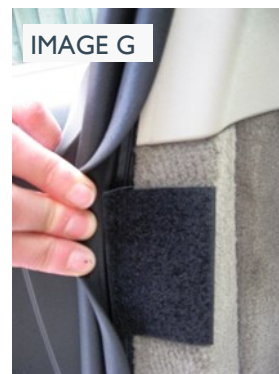

# OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

## STEP 5A. SEAT FLAP

### NET CASSETTE REMOVED

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the boot liner just below the top of the rear seats. *(image 1)*
- Fold the two outer headrests horizontally and allow the flap to sit over the top and down the back of the passenger seats. *(image 2)*

### IF NET CASSETTE IS INSERTED

- The net is a barrier between the boot load and the rear seat headrests. So the Seat Flap is now designed to be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. *(image 3)*
- Re-attach the top portion of the front panel ( the part with the elastic headrest straps) so that the seat flap can be fastened to the loop fastener strip.



## OPTIONAL EXTRAS page 2

*Please note the following photos are non-specific to your vehicle*

### STEP 5B. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 4)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



### STEP 5C. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.( image 5)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



*The Seat Flap 5A, The Bumper Flap 5CB & The Floor Extension 5C cannot be added at a late date*