

WARNING: LINER USES STRONG MAGNETS

Land Rover DEFENDER 110 -

2007 to 2016 Our ref H0479

WITH Safety Net removed from the back of the rear seat
Packing requirements

BOOTLINER

- ☐ Minimum of 5 self-adhesive loop fastener tabs
- Cut lengths of self-adhesive loop fastener:
 - 30mm wide – 2 @1080mm long
 - 20mm wide – 2 @200mm long
- 3 x ref: 107 (plastic + loop fastener)

REAR DOOR COVER

- ☐ Minimum of 21 self-adhesive loop fastener tabs



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the Bootliner to the plastic / metal

trim (**Not** the carpet), it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**. Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

FITTING

Base

- Place the liner into the car and fit the base snugly into place.
- Attach the two front ties to the rear seat brackets.
- Attach the 4 side ties to the luggage hooks
- The tailgate end of the base has 3 magnets which will attach to the thin metal strip.

Front

- Pass the 6 hook & loop fastener straps around the corresponding headrest posts and fasten close.
- The hook fastener welds on the reverse face of the panel will attach directly to the carpet on the back of the seats.

Sides

- Use the self-adhesive loop fastener strips to attach the sides snugly into place.
- Photo A: The 107 tabs slide over the taped edge of the carpet. The liner will attach to the fasteners.



REF: 107

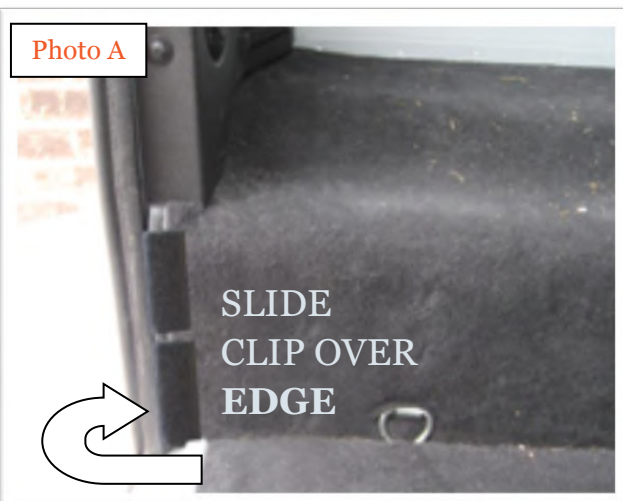


Photo A

SLIDE
CLIP OVER
EDGE