

JEEP GRAND CHEROKEE

2005-2011

Our ref: H0480



REF: 121



Please note: Photo shows a Rear Plus boot liner with an additional Split, and it is prepared for a Bumper flap

Packing requirements

BOOT LINER

- Minimum of 14 self-adhesive loop fastener tabs
2 x 415mm, 2 x 350mm, 1 x 155mm cut lengths of self adhesive loop fastener.
6 x ref:121 (plastic/loop fastener tab)

REAR DOOR COVER

- Minimum of 21 self-adhesive loop fastener tabs

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the boot liner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any hook & loop fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.

PREPARATION

Remove the load cover cassette. It can be replaced later.

Ensure all tie down rings are lying flat, and the floor tray is flat side up.



FITTING

BASE

- Place the liner into the car and fit the base snugly into place. The hook fastener welds on the reverse face of the base panel will attach directly to the carpet.
- Use the two corresponding lengths of self-adhesive loop fastener to attach the base extension to the plastic tailgate plate.

FRONT (Has the Hatchbag label)

- Pass the hook & loop fastener straps around each corresponding headrest posts, and fasten close to the corresponding hook fastener welds.
- Use the self-adhesive loop fastener tabs to attach the outer two hook fastener welds to the metal plates on the back of the rear seats.

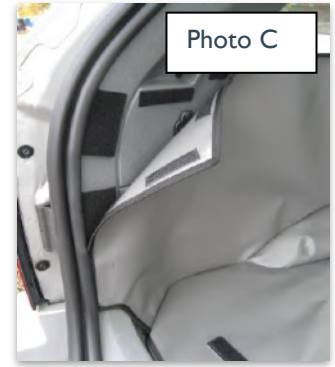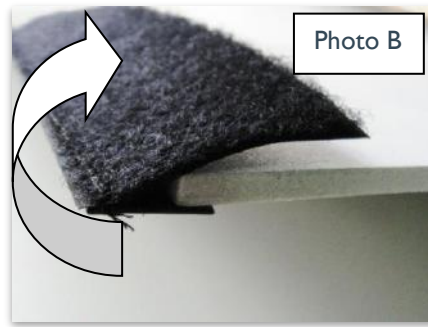

SIDES

- Position the side panels snugly into place.
- The ties attach to the rear seat's chrome locking bar.

Photo A + B + C (6 x ref: 121)


- At the tailgates end: Pull back the rubber seal. Slide the plastic part of the clip (ref. 121) behind the carpeted panel. The loop fastener section will remain exposed. See Photo K
- Re-align with the hook fastener welds on the liner and fasten.
- Use the self-adhesive loop fastener to attach the rest of the side panel to the plastic trim.

ADDITIONAL SEAT FLAP

Remove the middle headrest, fit the flap. Mark and cut two holes for the posts, should you wish to replace it on top. This way, it will not reduce your "rear view".

REAR DOOR COVER

Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

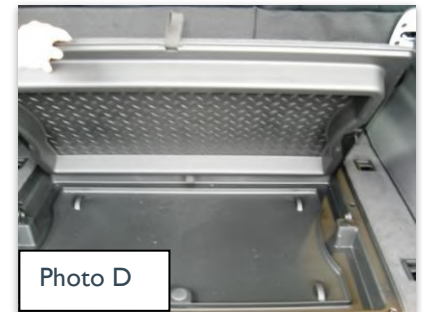

ADDITIONAL NOTES

FLOOR STORAGE NOTE:

Photo D: Please ensure you turn the floor's molded tray to the underside, so that the floor is flat.

HEADREST NOTE:

If the headrests do not rise up easily:

- Unlock the rear seat uppers to automatically recline the headrests.
- Relock the rear seat uppers.
- Whilst the headrests are still reclined: Pass the hook & loop fastener straps around the metal posts and fasten to the hook fastener welds.
- Manually upright the headrests.
- Tighten the hook & loop fastener straps.

REAR PLUS VERSIONS

YOU MUST UNFASTEN THE HOOK & LOOP FASTENER + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS