

PEUGEOT 307SW

7seater

2002 - 2008

Row 3 Removed

Our ref: H0489



REF : 125

Packing requirements

BOOT LINER

- Minimum of 8 self-adhesive loop fastener tabs
- 2 x 800mm cut lengths of 30mm wide self adhesive loop fastener.
- 6 x ref:125 (plastic/loop fastener tab) A=70mm

REAR DOOR COVER

- Minimum of 25 self-adhesive loop fastener tabs



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the boot liner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any loop fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

PREPARATION

- Remove 3rd Row seats.
- Remove the load cover cassette. It can be replaced later.
- Position 2nd Row seats as per your order.

FITTING

BASE


- Place the liner into the car and fit the base snugly into place.
- TIES:
 - 1: Seats slid as far forward version: The two front corner ties attach to the luggage hooks behind the Row 2 seats. You may find it easier to approach these from the passenger doors.
 - 2: There are two ties inserted into the base seam: they attach to the corresponding Row 3 seat locking bars.
 - 3: The remaining two attach to the net's metal frame.
- Use the self-adhesive loop fastener tabs to attach the base flaps to the chrome tailgate plate.

FRONT (Has the Hatchbag label)

- Pass the hook & loop fastener straps around each corresponding headrest posts, and fasten close to themselves.

SIDES

- Position the side panels snugly into place.
- There are two ties on the reverse face of the sides: Attach these to the 3rd Row grab handles, mounted on top of the wheel arches.
- The other two attach to the corresponding luggage tie down hooks.
- Use the long cut lengths of self-adhesive loop fastener to attach the top edge of the panel to the car's

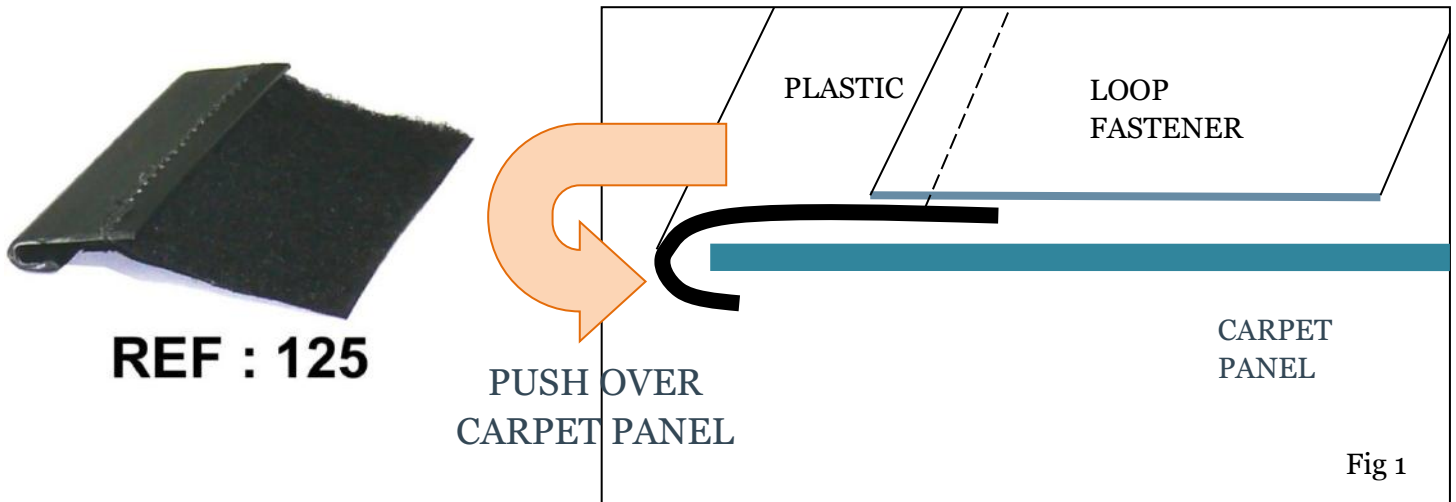

The x3 ref 125 tabs

- At the tailgate end: Pull back the rubber seal to expose the edge of the carpeted panel.
- The curved profile of the plastic tab sits over the carpet edge: See fig 1
- Re-align, and attach the hook fastener welds on the reverse face of the liner.

REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS**

REAR DOOR COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.