

APPLIES TO ALL 4 VERSIONS

CITROEN C3 PICASSO

2009on

Our ref: H0494

Packing requirements

BOOTLINER

- Minimum of 7 self-adhesive loop fastener tabs
Minimum of 150cm cut length of self-adhesive loop fastener

REAR DOOR COVER

- Minimum of 22 self-adhesive loop fastener tabs




*Please note; this shows a Rear Split version
False floor in + Row 2 Forward*

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 24hrs to reach full adhesion, do not disturb during.

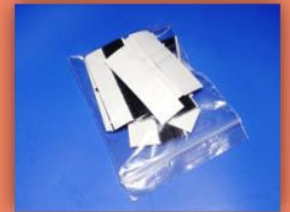

PREPARATION

Remove the load cover cassette.

Ensure the 2nd row seats and the floor level is appropriate to your model of Bootliner

FITTING

BASE

- Place the liner into the car and fit the base snugly into place. The hook fastener welds on the reverse face of the base panel will attach directly to the carpet.

FRONT (Has the Hatchbag label)

- Pass the hook & loop fastener straps around each corresponding headrest posts, and fasten close back upon themselves.
- The hook fastener welds on the reverse face of the front panel will attach directly to the carpet.

REAR PLUS VERSIONS

- YOU MUST UNFASTEN THE HOOK & LOOP FASTNER / THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS**

SIDES

- Carefully position the side panels snugly into place.
- Start at the tailgate end corner: see Photo A - and work towards the front.
- On some Bootliner versions the side panel is designed to go into the void between the rear seats and the side panel: see Photo B
- Use the self-adhesive loop fastener to attach the side panels to the plastic trim.



Optional Extras

Please note these photos are non-specific to your car.

REAR DOOR COVER FOR ALL VERSIONS

Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

PLEASE NOTE: YOU CANNOT REPLACE THE LOAD COVER CASSETTE WHILST USING THE REAR DOOR COVER



BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



Please note these photos are non-specific to your car.

SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the Rear Plus Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts

