

## TOYOTA AURIS 2007-2012

Our ref: H0497

(SUITS 3 Door & 5 Door Model)

### PACKING REQUIREMENTS

- BOOTLINER**  
Minimum of 4 self-adhesive loop fastener tabs  
2 x 250mm cut lengths of self adhesive loop fasteners.

- REAR DOOR COVER**  
Minimum of 23 self-adhesive loop fastener tabs

### PREPARATION

- Remove the load cover cassette. In most cases it can be replaced later.
- Ensure you have positioned the rear seat uppers into the position to suit your order.
- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.



### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

**NOTE:** the adhesive takes 24hrs to reach full adhesion, do not disturb during.



## FITTING

Please note the following photos are non specific to your vehicle.

### BASE

- Hook fastener welds attach directly to the carpet.



### FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten close back onto themselves.



### SIDES

- Carefully position the side panels snugly into place. The hook fastener welds on the reverse face of the panel will attach directly to the carpet.
- Use the self-adhesive loop fasteners to attach 2 of the nearside fastener pads to the appropriate plastic panel




### BACK

- Use the self-adhesive loop fasteners to attach the base to the tailgate plate.
- Attach the self-adhesive loop fastener tabs to the hook fasteners on the liner. Peel off protective backing, reposition panel and apply **FIRM** pressure at tab location points to ensure maximum adhesion to structure.



### FREQUENT USE KIT

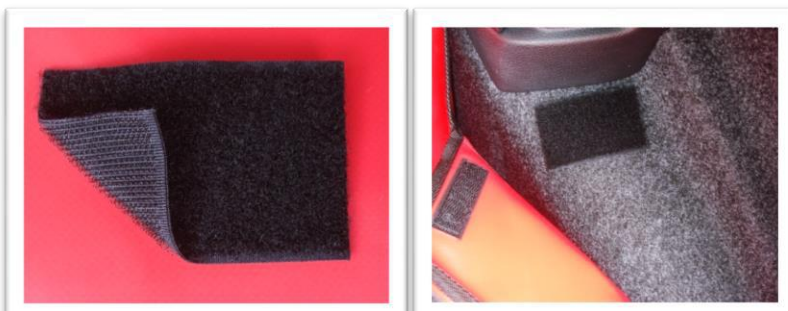

If you frequently remove/fit your Boot Liner from/to your vehicle please note that the carpet will “fluff” up – we have an alternative “Frequent Use Fitting Kit”

The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop.

## REAR PLUS VERSIONS

- YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS + THE HEADREST STRAPS BEFORE YOU FOLD THE REAR SEAT UPPERS ( Please refer to REAR PLUS options on website to see detailed photo's)

### SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.
- The width of the flap will be dictated by the rear seat seatbelt guides



### TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



### BUMPER FLAP

- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.

