

**SPECIFIC FITTING INSTRUCTIONS: APPLIES TO BOTH VERSIONS**

## LEXUS RX 2009on

Our ref: H0498

### Packing requirements

#### “BACK “BOOTLINER

☐ 6 x ref 121's

#### “FORWARD “BOOTLINER

☐ Minimum of 4 self-adhesive loop fastener tabs  
6 x ref 121's

#### REAR DOOR COVER

☐ Minimum of 8 self-adhesive loop fastener tabs



PHOTO: Rear Plus (WITH Seat Split) version prepared for a Bumper Flap

### PREPARATION

Remove the load cover cassette. It can be replaced later.

Ensure the 2<sup>nd</sup> row seats are positioned most upright and slid to match your model of Bootliner

### FITTING

#### BASE

- Place the liner into the car and fit the base snugly into place. Position the back edge to the tailgate end first and work forward. The hook fastener welds on the reverse face of the base panel will attach directly to the carpet.

#### FRONT (Has the Hatchbag label)

- Pass the hook & loop fastener straps around each corresponding headrest posts, and fasten close back upon themselves.
- The hook fastener welds on the reverse face of the front panel will attach directly to the carpet.

**REAR PLUS VERSIONS - YOU MUST UNFASTEN THE HOOK & LOOP FASTENER + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS**

If you intend to frequently remove/fit the Bootliner from/to your vehicle please note that the carpet will “fluff” up – we have an alternative “Frequent use fitting kit” – ask our sales team or see our on-line “factory shop”.



## SIDES

- Carefully position the side panels snugly into place.
- The hook fastener welds on the reverse face of the base panel will attach directly to the carpet.
- “SEATS SLID FORWARD “ liners: the front pair of hook fastener welds require the self adhesive pads to attach to the plastic trim.



### IMPORTANT PREPARATION “SEATS SLID FORWARD” liners ONLY

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the boot liner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim.

Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any self-adhesive fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

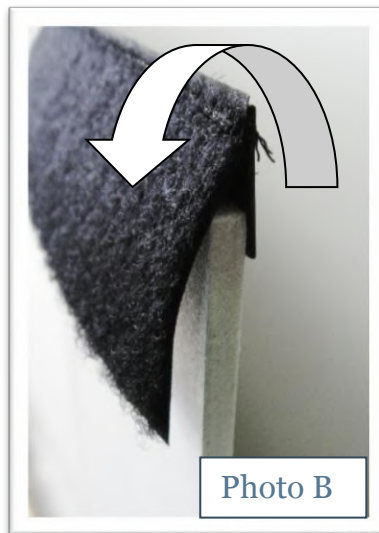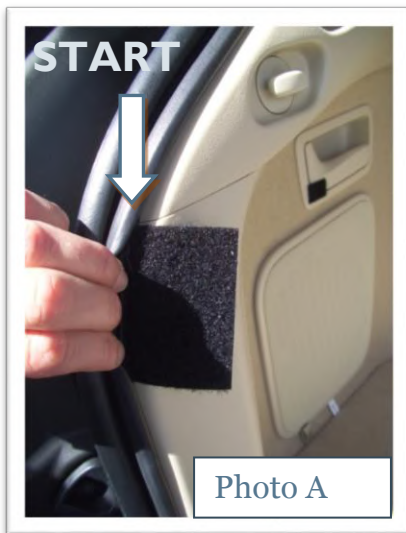

## SIDES AT THE TAILGATE END

Photo A + B + C

- See Photo A - From the “Start” point slide the plastic part of the large tabs ref. 121 behind the carpeted panel, so that the loop fastener section hangs in front carpeted panel. Refer to Photo B
- Photo C - The plastic section will remain trapped behind the panel.
- Each side requires 3 tabs.
- Slide down to correspond to the hook fastener welds on the liner.
- Fasten close – see Photo C

## REAR DOOR COVER FOR ALL VERSIONS

### REAR DOOR COVER

Use the self-adhesive loop fastener tabs to attach the cover to only the plastic trim area.

**PLEASE NOTE: YOU CANNOT REPLACE THE DOOR SECTION OF THE LOAD COVER WHILST USING THE HATCHBAG REAR DOOR COVER**



GENERIC PHOTO