

## Vauxhall Astra Hatch 5DR 2009 to 2015

Our ref: Ho499

### PACKING REQUIREMENTS

- ☐ **BOOTLINER**  
Minimum of 1 self-adhesive loop fastener tabs  
2 cut lengths of self-adhesive loop fastener cut @ 370mm
- ☐ **TAILGATE COVER**  
Minimum of 16 self-adhesive loop fastener tabs



### PREPARATION

Remove the load cover cassette. It can be replaced later.  
Ensure there is not a “FLEX Floor System” in place.

### FITTING

#### BASE


- Place the liner into the car and fit the base snugly into place. Position the back edge to the tailgate end first and work forward. The front seam sits just inside the protruding luggage tie down “D” rings. The hook fastener welds on the reverse face of the base panel will attach directly to the carpet.

#### FRONT (Has the Hatchbag label)

- Pass the hook & loop fastener straps around each corresponding headrest posts, and fasten close back upon themselves.
- The hook fastener welds on the reverse face of the front panel will attach directly to the carpet.

### REAR PLUS VERSIONS - YOU MUST UNFASTEN THE HOOK & LOOP FASTNER + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS

If you intend to frequently remove/fit the boot liner from/to your vehicle please note that the carpet will “fluff” up – we have an alternative “Frequent use fitting kit” – ask our sales team or see our on-line “factory shop”.

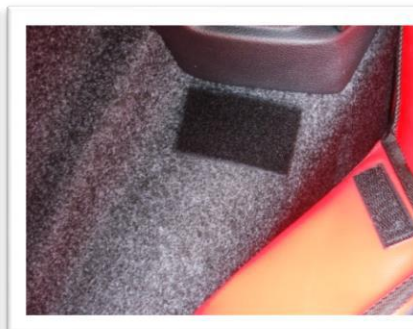

## SIDES

- Carefully position the side panels snugly into place.
- The hook fastener welds on the reverse face of the base panel will attach directly to the carpet.

## BACK

- Use the Self- adhesive loop fastener to attach the back panel to the plastic trim, at the tailgate end.

### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the Boot liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any hook & loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

Unfortunately, we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion, do not disturb during.



## TAILGATE COVER

### FITTING

Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



*AWAITING COVER PHOTO*