

TOYOTA LANDCRUISER LWB

2009 on

Our ref: H0503

PACKING REQUIREMENTS

- BOOTLINER**
2 X REF: 127 loop fasteners – ends self adhesive
Minimum of 23 self-adhesive loop fastener tabs
- REAR DOOR COVER**
Minimum of 20 self-adhesive loop fastener tabs



PREPARATION

- Remove the load cover. It may be replaced later
- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.


Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion, do not disturb during.



SEAT BELT PREPARATION

- With the aid of the fastener tabs ref: 127 - secure the 3rd row seatbelts to sit close to the wheel arches.
- Place the seat belts behind the tidy catches as shown in these photos.

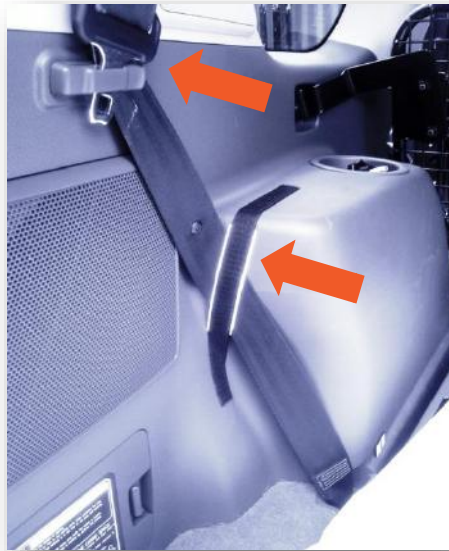

(Please note the following photos are generic)

BASE

- Hook fastener welds attach directly to the carpet.
- Begin at the tailgate and work to the front of the car.



FITTING FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.
- The hook fasteners welded to the reverse face of the liner will attach directly to the carpet on the back of the seats.



REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS (Please refer to REAR PLUS options on website to see detailed photo's)**

SIDES

- Carefully position the side panels snugly into place.
- Use the self-adhesive loop fasteners to attach the side to the plastic trim. Attach the self-adhesive loop fastener tabs to the hook fasteners on the liner. Peel off protective backing, reposition panel and apply **FIRM** pressure at tab location point to ensure maximum adhesion to structure. Repeat for each fastener.
- To replace the load cover, carefully create openings in the side panels to accommodate the cassette.



OPTIONAL EXTRAS

FREQUENT USE KIT

If you frequently remove/fit your Boot Liner from/to your vehicle please note that the carpet may “fluff” up – we have an alternative “Frequent Use Fitting Kit”

The Frequent Use Kit is available to buy from our “on-line” Factory Shop –



TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the lowered rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



BUMPER FLAP

- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.

