

## BOOT INTERIOR SHAPES

Two variations available for the LANDCRUISER LWB

Please take some time to consider which of the two most suits your requirements.

### SHAPE 1



LOOK AT THE FLOOR SHAPE

The nearside is wider at the tailgate end, where it goes into a recess behind the wheel arch

FLOOR SHAPE 1



NEARSIDE RECESS



OFFSIDE FLAT VENT PANEL

## BOOT INTERIOR SHAPES

Two variations available for the LANDCRUISER LWB

Please take some time to consider which of the two most suits your requirements.


### SHAPE 2



LOOK AT THE FLOOR SHAPE

The offside is wider at the tailgate end, where it goes into a recess behind the wheel arch

FLOOR SHAPE 2

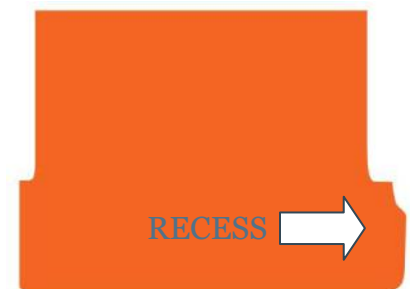

NEAR SIDE FLAT VENT PANEL



OFFSIDE RECESS

SORRY WE **CANNOT** SUPPLY THIS SHAPE



DEEPER OFFSIDE RECESS