

## Mercedes E class Estate 2010 to 2016

Ref H0508

### Packing requirements

#### BOOTLINER

- Minimum 6 self-adhesive loop fastener tabs
- 2 cut lengths of 30mm wide self-adhesive loop fastener: cut @ 760mm
- 8 x ref: 121 (plastic + loop fastener)
- 2 x ref: 124 (260mm length)
- Split front versions – 1 x ref 104

#### TAILGATE COVER

- Minimum 26 self-adhesive loop fastener tabs



REF: 121



REF: 124



REF: 104

### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the Bootliner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any self-adhesive fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion, do not disturb during.

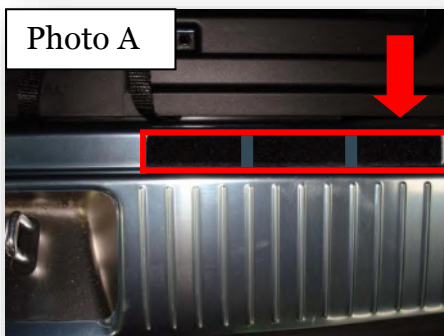


Photo A

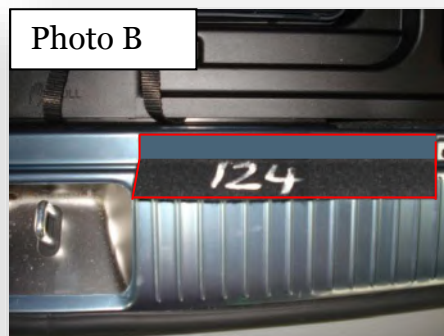


Photo B

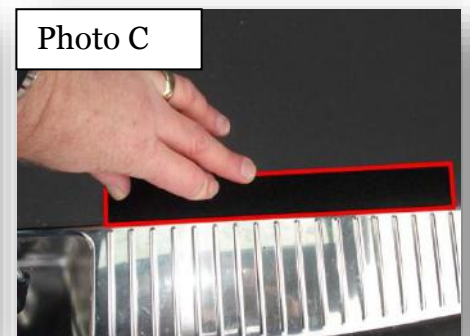


Photo C

- Place the liner into the car and fit the base snugly into place.

#### Photo A to C

- Locate the 6 hook fastener welds on the reverse side of the base at the tailgate end.
- Lift up the liner base with the vehicle's false floor.
- Photo A: Attach 2 lots of 3 self-adhesive loop fastener pads to the recess of the metal tailgate strip. Ensure you align them to the liners hook fasteners.
- Photo B: Attach the two tabs ref: 124 to this fastener. The loop fastener section will protrude upwards
- Photo C: The base fasteners will attach to the protruding tabs. *Please note this photo is non-specific to your car.*



Photo D

*Please note the following photos are non-specific to your car*

**BASE - Photo D**

- Push the two foam tabs down into the void between the rear seat and the boot floor.
- Re-lock the rear seat back rest to trap these tabs.

**FRONT - Photo E**

- Hook & loop fastener straps align to headrests.
- Pass around each post and fastene back onto themselves.

**REAR PLUS VERSIONS**

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS / HEADREST STRAPS BEFORE YOU FOLD THE REAR SEAT UPPERS** ( Please refer to REAR PLUS options on website to see detailed photo's)

**DO NOT USE THE “QUICKFOLD” RELEASE LEVERS** (Located in the boot + on the rear seat) **BEFORE UNFASTENING THE HEADRETS STRAPS**

- We have provided a tab ref 104 to fix the leading fastener edge of the 60% Split edge to the strip of plastic on the seat edge.



Photo E

**SIDES**

- Place the side panels snugly into place.

**Photo E**

- Unlock the two access panels in the sides of the car. The lengths of elastic sewn onto the reverse face of the line sides pass over the panel doors and sit almost midway down. Re-lock panel doors.



Photo E

**Photo F**

- Use the 2 long cut lengths of self-adhesive loop fastener to attach the top edge of the side panels to the plastic trim.

**Photo G + H + I (8 x ref: 121)**

**ATTENTION:** the following steps may not work on every model due to some models not having access behind the carpeted panel. In this case the rear sides of the liner will not attach to the boot and will hang free. (Image J)

- At the tailgates end: Pull back the rubber seal and slide the plastic part of the clip (ref. 121) behind the carpeted panel. The loop fastener section will remain exposed. See Photo I
- Re-align with the hook fastener welds on the liner and fasten.



Photo F



Photo G



Photo H



Photo I



Photo J

**PLEASE NOTE**

**THE BOOTLINER WILL NOT ACCOMMODATE THE USE OF THE MERCEDES “EASY-PACK LOAD SECURING KIT”**



*Please note these photos are non-specific to your car.*

## TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



## SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the Rear Plus Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



## BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.

