

Kia Cee'd SW 2007 on

Our ref: H0514

Packing requirements

BOOTLINER

- Requires no fixings

REAR DOOR COVER

- Minimum of 17 self-adhesive loop fastener tabs



Please note: photo shows Dog Guard version – prepped for a Bumper Flap

PREPARATION

- Remove the load cover. It may be replaced later.
- Remove Dog Guard, and replace once the boot liner is in place.

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any self-adhesive fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.



Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.

Please note some of these photos are non specific to your vehicle.

BASE


- Position the base snugly into place. Start at the tailgate end.
- The hook fastener welds will attach directly to the carpet.

KIA DOG GUARD SUITABILITY

Ensure you order the "DOG GUARD" version should you need access to the 2 "D" rings positioned behind the Rear seats.

- 2 bound cutouts in the base panel provide access to these fixing points.

You **MUST** order a REAR PLUS version with the "Dog Guard" option.

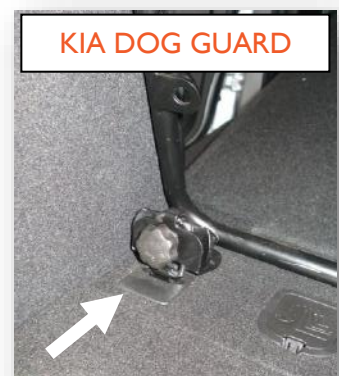

FITTING FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.
- **SPLIT VERSION:** The hook fastener welds will attach directly to the carpet.



REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS ('Please refer to REAR PLUS options on website to see detailed photo')**

SIDES

- Carefully position the side panels snugly into place.
- The hook fasteners welded to the reverse face of the liner will attach directly to the carpet panels.



- The 2 rear “D” rings are accessible: Two bound slots in the side panels provide access to these fixing points.



Optional extras

FREQUENT USE KIT

If you frequently remove/fit your Boot Liner from/to your vehicle please note that the carpet will “fluff” up – we have an alternative “Frequent Use Fitting Kit”

The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop.



Please note the following photos are non-specific to your vehicle

TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

