

BMW I Series

2011 to 2019 5 Door & 2012 on 3 Door
With OR Without “Extended Storage & Pack/Plastic Storage Insert”

Our Ref H0530



BOOT VERSION: - With “Extended Storage Pack”

Packing requirements


- BOOTLINER
 - Minimum of 9 self-adhesive loop fastener tabs
 - 32 x ref:113 – Hook / Loop patches
- REAR DOOR COVER
 - Minimum of 16 self-adhesive loop fastener tabs



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**. Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.

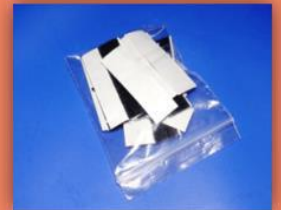

PREPARATION

- Remove the load cover. It may be replaced later.
- Unfold the Hatchbag and place in the vehicle. The panel with the Hatchbag label sits against the back of the rear seat.

FREQUENT USE TABS – REF: 113

- If you frequently remove/fit your Boot Liner from/to your vehicle please note that the carpet will “fluff” up
- We have included a set of “Frequent Use Tabs”
- Whilst fitting the Boot Liner “sandwich” a Patch between the carpet and the boot Liner at each fastener weld.
- Leave the patch attached to the carpet at all times.



Please note not all of the photographs are specific to your vehicle

BASE

- Position the base snugly into place.
- The hook fastener welded to the reverse face of the liner will attach directly to the carpet panels *
- * Optional – see also ref:113 tabs



FITTING FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.
- Any hook fasteners welded to the reverse face of the liner will attach directly to the carpet panels.




REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENER + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS** (*Please refer to REAR PLUS options on website to see detailed photo*)

SIDES **WITHOUT** “EXTENDED STORAGE PACK / Plastic Storage Insert”

- Carefully position the side panels snugly into place.
- The hook fastener welded to the reverse face of the liner will attach directly to the carpet panels

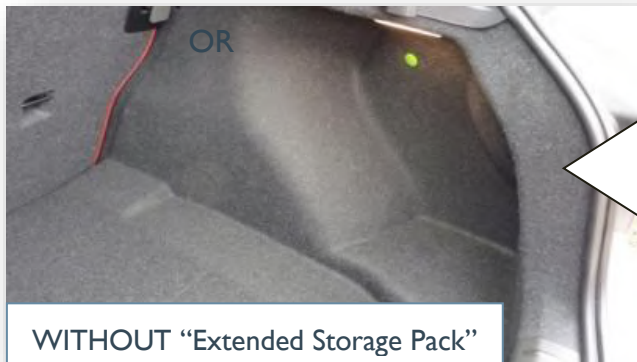

SIDES **WITH** “EXTENDED STORAGE PACK / Plastic Storage Insert”

- Carefully position the side panels snugly into place.
- The hook fastener welded to the reverse face of the liner will attach directly to the carpet panels

Photo's 1-2-3

1: Remove the plastic storage box and fit the offside snugly into place.

2: Feed the unbound section of the flap under the net.

3: Replace the storage box.



SIDES **WITH NET ONLY** + No Plastic Storage Insert

- Carefully position the side panels snugly into place.
- The hook fastener welded to the reverse face of the liner will attach directly to the carpet panels
- Feed the unbound section of the flap under the net as shown in photo 2. *Reposition it to sit under the Bootliner side panel*

BACK

- Position the back snugly into place.
- Use the self-adhesive loop fastener tabs to attach the back panel to the plastic.



Optional extras

Please note the following photos are non-specific to your vehicle

TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

(The following items cannot be added at a late date)

BUMPER FLAP

- Fit Boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the Rear Plus Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Lower the head rests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

