

CHEVROLET CAPTIVA

2007 to 2015 (Inc. 2012 facelift)

Our ref: H0538



Please Note: This is a Rear Plus with Seat Split version, prepared for a Bumper Flap

Packing requirements

BOOTLINER

- 1850mm long cut length of **30mm** wide self adhesive loop fastener
- Minimum of 6 self-adhesive loop fastener tabs

REAR DOOR COVER

- Minimum of 17 self-adhesive loop fastener tabs

VERY IMPORTANT PREPARATION



To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any self-adhesive fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.

PREPARATION

- Remove the load cover cassette. It can be replaced later.
- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.

The 3rd row seat belts need to be repositioned as shown in this photo.

- Lift up the two outer most carpeted floor panels and pass the seat belt under.



Please note some of these photos are non specific to your vehicle.

FITTING

BASE

- Position the base snugly into place. Start at the tailgate end.



FITTING FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.



NOTE: REAR PLUS VERSIONS

- YOU MUST UNFASTEN THE HOOK & LOOP FASTENER + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS ('Please refer to REAR PLUS options on website to see detailed photo')




SIDES

- Carefully position the side panels snugly into place.
- Use the self-adhesive loop fasteners to attach the side panels to the plastic trim. Attach a continuous length along the top edge of the side panels, as indicated by the orange line in the top left photo. Use the pre-cut patches down the rear ends of the sides.
- Open the hook & loop fastener seam, pass around and fasten behind the 3rd row seat belts.

3RD ROW SEAT BELT COVERS

- Please ask our sales team about additional seat belt covers

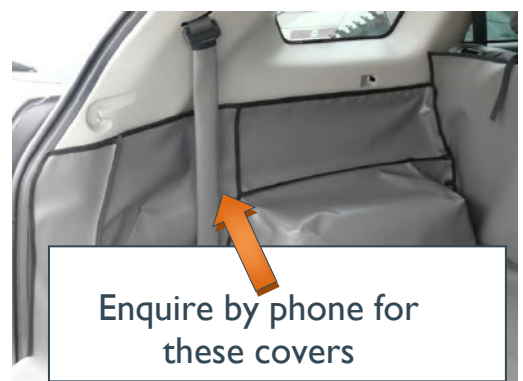

Optional extras

Please note the following photos are non-specific to your vehicle

SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the Rear Plus Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.



BUMPER FLAP

- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



FREQUENT USE KIT

If you intend to frequently remove/fit the Bootliner from/to your vehicle please note that the carpet will "fluff" up – we have an alternative "Frequent use fitting kit" – ask our sales team or see our on-line "factory shop".

