

BMW 3-SERIES TOURING

2012 to 2019

Our Ref: H0545

Packing requirements



BOOTLINER

- 8 x self-adhesive loop fastener pads
- 4 x ref: 124 (hook + loop fastener @160mm long)
- 1300mm length of 30mm wide self-adhesive loop fastener



TAILGATE COVER

- 16 x self-adhesive loop fastener pads



REF: 124



Photo shows "Rear Plus with Seat Split, prepared for a Bumper Flap"

VERY IMPORTANT PREPARATION



To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

Unfortunately, we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.

PREPARATION

- Remove the Load Cover and Net Cassette. They may be replaced later.
- Recline rear seats.
- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.

FITTING

BASE

Position the base of the liner snugly into place.

Photo A+ B



Familiarize yourself with the position of the 8 hook fastener welds on the reverse side of the liner at the tailgate end.

- Photo A:

Lift up the false floor. Attach the 4 ref: 124 hook / loop fastener tabs to the plastic ledge using the 8 self-adhesive loop fastener tabs – see photo to identify the ledge.

- Photo B:

The tabs will protrude out of the floor panel when its replaced allowing the liner to be fastened to them.

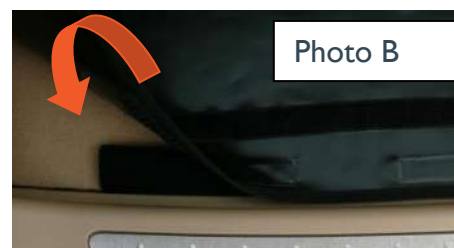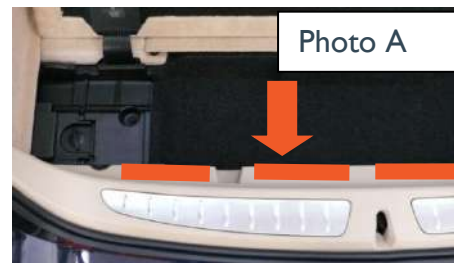

(Please note this photo is non-specific to your car)

BASE cont....

- Push the two foam tabs down into the void between the rear seat and the boot floor.
- Re-lock the rear seat uppers, trapping the foam securely.



FRONT

- Pass each of the corresponding hook & loop fastener straps around each headrest post, and firmly fasten back upon themselves



REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS** (*Please refer to REAR PLUS options on website to see detailed photo's*)



SIDES

- Use the long length of self-adhesive loop fastener to attach the side panels to the plastic trim above and to the side of the carpet.
- You will need to snip the fastener strip around the curved section.
- Both the Net Cassette and Load Cover Cassette can be carefully replaced / removed.



Side attached to the loop fastener



Net Cassette + Load Cover Cassette replaced



Optional extras

BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the Rear Plus Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

