

FITTING INSTRUCTIONS

hatchbag.co.uk

Kia Sorento 2010on "HIGH" version

Our ref: Ho554HIGH

Packing requirements

BOOTLINER
2 x refs 117

Minimum of 28 self-adhesive loop fastener tabs

REAR DOOR COVER

Minimum of 20 self-adhesive loop fastener tabs



Awaiting Boot Liner photos

REAR SEAT INFORMATION

2nd Row Seats are almost upright 3rd Row Seats are folded + not useable

The Boot Liner will NOT fit correctly if you do not position your seats as above



Row 2 Seats almost upright



Row 2 Seats reclined

PREPARATION

- Remove the load cover cassette; it can NOT be replaced later.
- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.

REF: 117

VERY VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fasteners to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth.**






NOTE: the adhesive takes 24hrs to reach full adhesion, do not disturb during.

3RD Row Seat Belts

- Pull on the seat belt to create enough slack so that the belt sits flush to the boot side.
- Position the Tongue (male) Connector behind the Tidy hook.
- Attach the ref 117 with the self adhesive pads over the belt as shown in the photo.

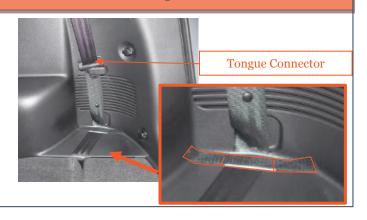

FITTING

BASE

- Position the base of the liner snugly into place.
- Hook fastener welds attach directly to the carpet.



FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten close back onto themselves.

REAR PLUS VERSIONS

YOU MUST UNFASTEN THE HOOK & LOOP FASTENER +
THE HEADREST STRAPS BEFORE YOU FOLD THE REAR
SEAT UPPERS Please refer to REAR PLUS options on
website to see detailed photo's



SIDES

- Carefully position the side panels snugly into place.
- Use the small tabs of self-adhesive loop fasteners to attach the side to the plastic trim.



OPTIONAL EXTRAS

TAILGATE COVER

• Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

Please note: Photo is non-specific to your vehicle



Please note: Photos are non specific to your vehicle

SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.





BUMPER FLAP

- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



FLOOR EXTENSION

The "Floor extension" offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.

- The **Floor extension** is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.

The max width is 148cm (see photo on left). It will offer **no** protection to the rear doors



(This item cannot be added at a late date)

