

Mercedes A Class 2013 - 2018

Our ref.: H0557

Packaging requirements


- BOOTLINER
Minimum of 6x self adhesive loop fastener tabs
- TAILGATE COVER
Minimum of 14x self adhesive loop fastener tabs



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the Bootliner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any self-adhesive fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth. Unfortunately, we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

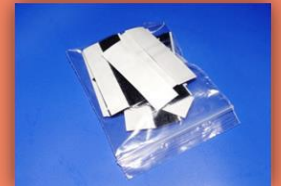

PREPARATION

- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.

Please note not all the photographs are specific to your vehicle

BASE

- Position the base snugly into place. Start at the tailgate end.
- The hook fasteners welded to the reverse face of the liner will attach directly to the carpet panels.

BACK

- Use the self-adhesive loop fasteners to attach the back panel to the tailgate plate.



FITTING FRONT

- The hook fasteners welded to the reverse face of the liner will attach directly to the carpet panel.

REAR PLUS VERSIONS

YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS BEFORE YOU RECLINE THE REAR SEAT UPPERS

(Please refer to REAR PLUS options on website to see detailed photo')



SIDES

- Carefully position the side panels snugly into place.
- The hook fasteners welded to the reverse face of the liner will attach directly to the carpet panels.



Optional extras

FREQUENT USE KIT

If you frequently remove/fit your Boot Liner from/to your vehicle please note that the carpet will “fluff” up – we have an alternative “Frequent Use Fitting Kit”

The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop.



BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



SEAT FLAP

PLEASE NOTE: We have two versions of the seat flap available – Please ensure you order the most suitable for your requirements

TAILORED SEAT FLAP

- The Tailored Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- Most suitable for the Standard Boot Liner.
- **Be aware the seat flap may obstruct your rear seats belts.**

Please ensure it does not obstruct the seatbelts when using them.

PLEASE NOTE: This flap does not suit the Rear Plus Option(s): Flap needs to be removed when rear seats are folded.

Tailored Seat Flap



STANDARD SEAT FLAP

- Can NOT be used to protect the top of your rear seats.
- The Standard flap offers protection when used in conjunction with the Rear Plus Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.

Exposed



Standard Seat Flap



TAILGATE COVER

- Use the self-adhesive loop fasteners to attach the back panel to the tailgate plate.