

TOYOTA RAV4 (5DOOR) - 2013 to 2019

INC. HYBRID

OUR REF: H0560-HY / HYN0

PACKAGING REQUIREMENTS.

BOOT LINER

- **2x 550mm** 30mm wide self-adhesive loop fastener
- **2x 230mm** 30mm wide self-adhesive loop fastener
- **2x 360mm** 30mm wide self-adhesive loop fastener
- **1 x tabs** self-adhesive loop fastener



Left: Non Hybrid Rear Plus version

Right: Hybrid Standard version

Both prepared for additional seat + bumper flaps

TAILGATE COVER

- **21 x tabs** self-adhesive loop



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener sticks to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 loop fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary)
3. Attach the hook & loop fastener and let them fully adhere over the next 24 hours for the best bond.



**The Hook & loop fastener cannot be used once it has been in contact with silicone. Replacement kits are*

Please note not all of the photographs are specific to your vehicle

STEP 1. PREPARATIONS



The boot liner and the vehicle's load cover function correctly when the rear seat uppers are set at a specific rake.

Please ensure your rear seats are set at the following configuration:

Set the Rear Seat Uppers at an angle that allows the Load Cover clips to be fastened.

(image A)

(Should your model not have a Load Cover, follow the fitting instructions BUT leave the "FRONT" stage till last, and use the boot Liner Sides as a guide for the seat rake)

The boot liner will not suit reclined seats

(image B)



HYBRID VEHICLES ONLY:

Ensure the rear end of the floor is at its lowest level creating a step in the floor. (image C)



STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Starting at the tailgate end flatten the base so it fits snugly against the edges. The hook fastener welded to the reverse face fixes directly to the carpet. (image D)
- Hybrid vehicles : position the raised section of the base . The hook fastener welded to the reverse face fix directly to the carpet. (image E)



STEP 3. FITTING THE FRONT

- - **PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fastener between the side panels and the seat panel. (image F)
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. (image G). Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Repeat the procedure with the left and right headrests.
- The two hook fastener welds on the reverse face of the front panel attach directly to the carpet on the back of the rear seats.

REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fastener + the headrest straps before you recline the rear seat uppers. (*Please refer to REAR PLUS / SPLIT options on website to see detailed photo*)




STEP 4. FITTING THE SIDES



Locate the corresponding cut lengths of self-adhesive loop fastener and attach them to the plastic side panels, just below the joint line, and down the back side. See green highlights on **Image H**. Snip the loop fastener as you go, to help it follow the curves.

- On the nearside you will also need to trim away for the interior light. **Image I**.
- Repeat on opposite side.

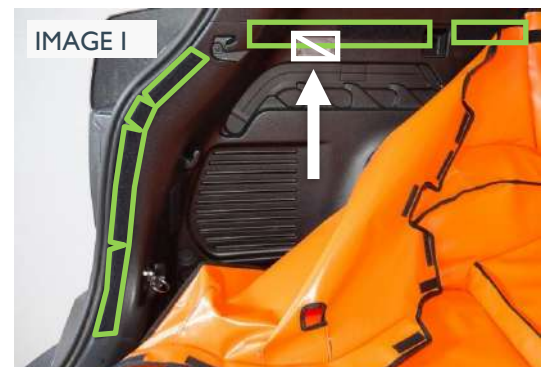

STEP 4. FITTING THE SIDES CONTINUED

- Fasten the hook fastener welded onto the reverse face of the boot liner to the previously attached loop fastener. (Image J, K, L + M)




Non hybrid Rear Plus boot liner prepared for a Bumper flap and a Seat Flap



Hybrid Standard boot liner prepared for a Bumper flap and a Seat Flap

- If you have sides designed to take hanging nets you will find you cannot add the additional loop fastener under the light. (image N)
- The bound cut-out in the sides sit over the hooks. (image O)

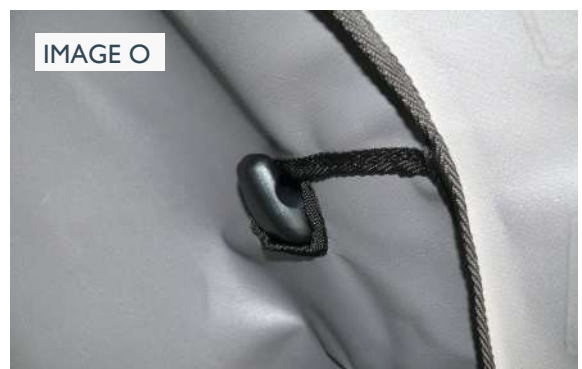

OPTIONAL EXTRAS


Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the boot liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



STEP 5B. TAILGATE COVER

-  Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.(image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date

STEP 5E. FREQUENT USE KIT

- If you frequently remove/fit your boot liner from/to your vehicle please note that the carpet may “fluff” up – we have an alternative “Frequent Use Fitting Kit” (image 7+8)

The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop. These can also be ordered at a later date.

