

PEUGEOT 208 Hatch

2012 to 2019

Our ref: H0565



REF: 107



Packing requirements

- BOOT LINER**
Minimum of 1 self-adhesive loop fastener tabs
4 x ref 107 (plastic "J" profile clips)
550mm cut length of 20mm wide self-adhesive loop fastener
- REAR DOOR COVER**
Minimum of 13 self-adhesive loop fastener tabs



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive fastener to attach the boot liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.



PREPARATION

- Remove the load cover. It may be replaced later.
- Unfold the Hatchbag and place in the vehicle. The panel with the Hatchbag label will sit against the back of the rear seat.

Please note not all of the photographs are specific to your vehicle

BASE

- Ensure front section of base carpet lying flat, and not raised
- Position the base snugly into place. Start from the tailgate end.
- The hook fastener welded to the reverse face of the liner will attach directly to the carpet panels.



FITTING FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.




REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENER / THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS (Please refer to REAR PLUS options on website to see detailed photo')**



SIDES

- Carefully position the side panels snugly into place.
- The hook fastener patches welded to the reverse face of the liner will attach directly to the carpet panels.
- **A** - The two hook fastener tabs that protrude above the boot liner's black taped edge need to be pushed up behind the vehicles plastic trim. Press to ensure the hooks grip.
- **B** - At the tailgate end: peel back the rubber seal to expose the edge of the carpet panel. Slide the curved section of the plastic clip over this carpet edge. Reposition so that the liner will attach to

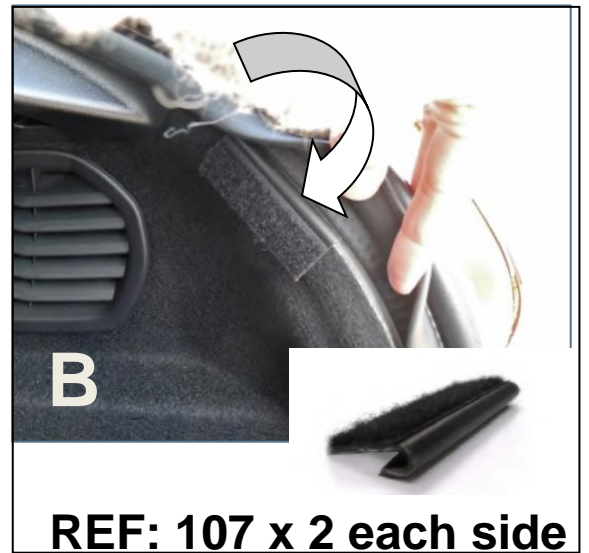

BACK

- Use the long length of 25mm wide self-adhesive loop fastener to attach the back panel to the tailgate plate. Cut to size



FREQUENT USE KIT

If you frequently remove/fit your boot liner from/to your vehicle please note that the carpet will "fluff" up – we have an alternative "Frequent Use Fitting Kit"

The Frequent Use Kit is available to buy from our "on-line" Factory Shop – simply add it to your order from the Factory Shop.



Please note these photos are non-specific to your car.

TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the Rear Plus Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the boot liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts



BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.





BEFORE APPLYING THE
SELF-ADHESIVE HOOK & LOOP FASTENER

YOU MUST FOLLOW
OUR CLEANING PROCEDURE

SEE **VERY IMPORTANT PREPARATION** : PAGE 1

