

Hyundai i30 Hatch 2012-2017

SPACE SAVER SPARE ONLY

Our ref: HO567SS

- Packing requirements
- BOOTLINER
 - Minimum of 7 Self adhesive loop fastener tabs
 - REAR DOOR COVER
 - Minimum of 18 Self adhesive loop fastener tabs



Photo shows Rear Plus WITH Seat Split, prepared for a Boot Liner Extension



The Boot liner is designed to suit vehicles with **ONLY** a Space Saver spare wheel + **NO** foam storage tray.

PREPARATION

- Remove the load cover. It may be replaced later.
- Unfold the Hatchbag and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.



WARNING

DO NOT ATTACH ANY SELF ADHESIVE VELCO TO THE BACK FACE OF THE REAR SEATS
It will cause damage to the surface




VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 72hrs to reach full adhesion – do not disturb during.

NOT USE THE TAR REMOVER ON THE BACK FACE OF THE REAR SEATS
It may cause damage to the surface

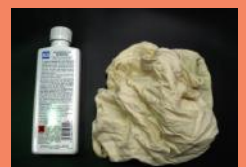

Please note not all of the photographs are specific to your vehicle

FITTING

BASE

- Position the base snugly into place. Start at the tailgate end and work forward.
- The hook fasteners welded to the reverse face of the liner will attach directly to the carpet panels.




FITTING FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.



REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS (Please refer to REAR PLUS options on website to see detailed photo')**

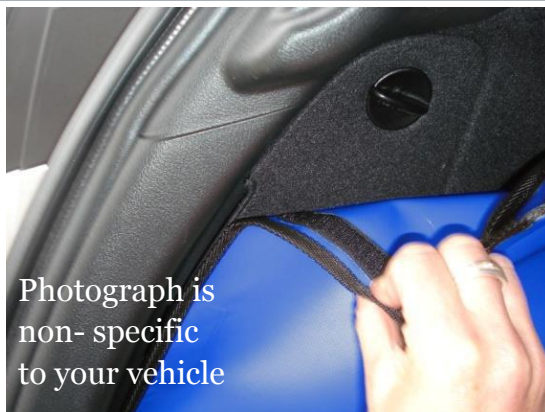

Photograph is non-specific to your vehicle



SIDES

- Carefully position the side panels snugly into place.
- The hook fasteners welded to the reverse face of the liner will attach directly to the carpet panels.
- The nearside pocket flap can be fixed with a self-adhesive pad to the back face of the plastic pocket panel – Please note you will need to find the flat part of the latticed back to fix the fastener to.

BACK

- Use the self-adhesive loop fastener tabs to attach the back panel to the plastic tailgate plate.



Optional extras

Please note not all of the photographs are specific to your vehicle

BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

