

Toyota AURIS TOURING (Incl. Hybrid) 2013 - 2018

LOW FLOOR - False Floor Removed

Our ref: Ho568-FOUT

PACKING REQUIREMENTS

- BOOTLINER
450mm cut length of 30mm wide self-adhesive loop fastener
- REAR DOOR COVER
Minimum of 16 x Self-adhesive loop fastener tabs



The Boot liner is designed to suit vehicles with the False Floor **REMOVED**



PREPARATION

- Remove the load cover. It may be replaced later.
- Remove and store elsewhere both the central and nearside section of the Dual Level Deck board (i.e. False Floor + Nearside storage compartment)



The thin carpet base that sits over the foam tray, remains.

Unfold the Hatchbag and place in the vehicle. The panel with the Hatchbag label sits against the back of the rear seat.

Please note not all the photographs are specific to your vehicle

BASE

- Position the base snugly into place. Start at the tailgate end and work forward.
- The hook fasteners welded to the reverse face of the liner will attach directly to the carpet panels.



FITTING FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.




REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS (Please refer to REAR PLUS options on website to see detailed photos)**

SIDES

- Carefully position the side panels snugly into place.
- The hook fasteners welded to the reverse face of the liner will attach directly to the carpet panels. The carpet has closely bonded fibers, so you will need to press and shift a little to get it to adhere sufficiently.
- Use the strip of loop fastener to attach the section of the side along the top edge of the offside plastic pocket. See photo A.
- For models that do not have a pocket, there is an additional flap that can be attached over the exposed carpet. See photoB

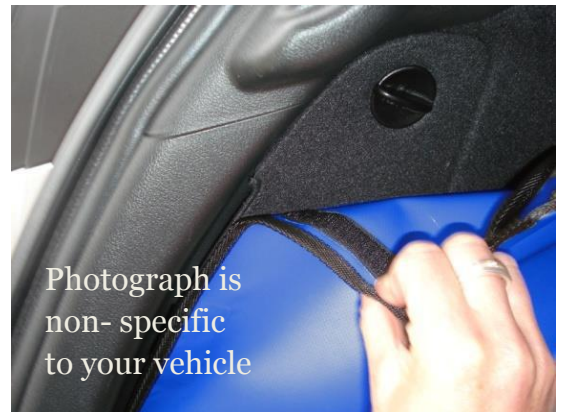

Photograph is non-specific to your vehicle



Photo A

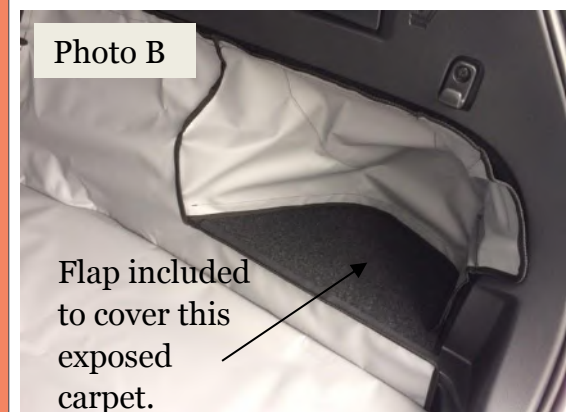


Photo B

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the liner to the side plastic pocket, it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 48hrs to reach full adhesion – do not disturb during.



OPTIONAL EXTRAS

Please note not all of the photographs are specific to your vehicle

BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Tailgate cover to the plastic it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 72hrs to reach full adhesion – do not disturb during.

