

## Range Rover Sport 2013 to 2022

Our ref: H0574

### Packing requirements

- BOOT LINER**  
6 ref. 121 (plastic/loop fastener tab)  
1300mm cut length of 30mm self-adhesive loop fastener  
12 x self-adhesive loop fastener tabs
- REAR DOOR COVER**  
8 x self-adhesive loop fastener tabs  
1100mm cut length of 30mm self-adhesive loop fastener



REF: 121



SELF-ADHESIVE VELCRO TABS

### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the boot liner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any hook & loop fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.



### PREPARATION

- Remove the parcel shelf, it can be replaced later. If you do not have a Range Rover Dog guard: Unlock the rear seats and fold flat.
- You will need a pair of scissors and a spoon



*Please note: some photos are non-specific to your vehicle.*

### FITTING – NO DOG GUARD VERSION

 *Land Rover Dog Guard Version – skip to page 3*

#### BASE

- Place the liner into the car and fit the base snugly into place.
- Use the self-adhesive loop fastener tabs to attach the tailgate end to the chrome trim. Ensure the base it is sitting straight and not skewed before you push the two foam filled tabs down into the void between the rear seat and the boot floor.
- Re-lock the rear seat uppers to trap these tabs.



## FRONT

- The four hook & loop fastener straps fasten to the outer headrests.
- Pass around each post and fasten back onto themselves.
- Wrap the large elastic strap around the central fixed headrest. Fasten close to the front panel.



## NOTE: REAR PLUS / SPLIT VERSIONS


- You must unfasten all headrest straps before you recline the rear seat uppers (Please refer to REAR PLUS options on website to see detailed photo)
- Other version may have different headrest straps/elastic

## SIDES


- Carefully position the side panels snugly into place.
- The bound cut-outs correspond with the interior lights/power socket.
- Use the 30mm wide self-adhesive loop fastener to attach the sides to the plastic trim.
- Locate where the two sets of hook fastener welds are on the ends of the side panels. The ref: 121 plastic/loop fastener tabs once fitted will fasten to these.

### Fitting the ref: 121 tabs

- Hold back the rubber seal on the door aperture to expose the carpet panel edge.
- Carefully feed the spoon handle into the narrow void behind the carpeted panel. This will help to open-up this void.
- Push the plastic section of the ref: 121 tabs into this void.
- Reposition to align with the hook fastener welds on the Liner.
- Fasten close the hook & loop fastener.

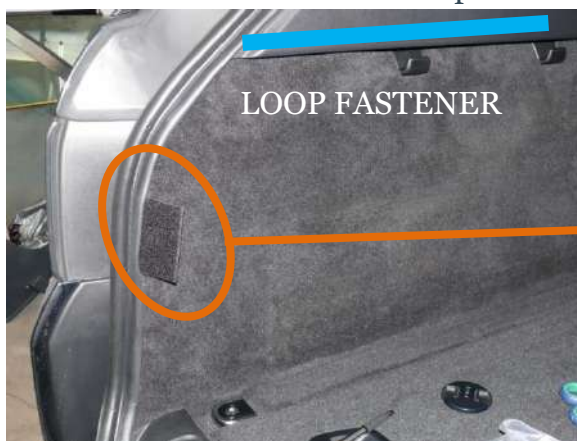

Spoon handle

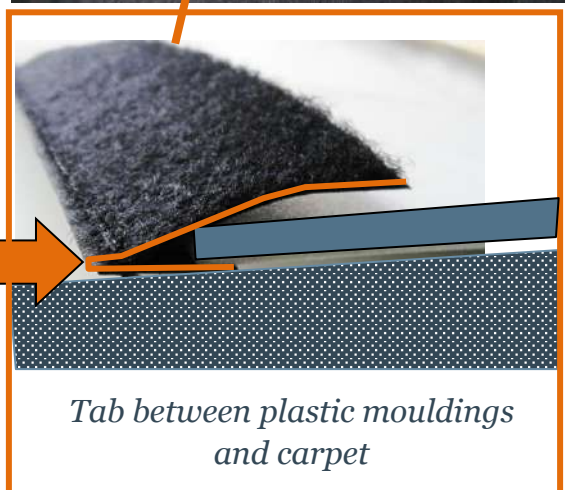



## FITTING – LAND ROVER DOG GUARD VERSION

REFERS TO DOG GUARDS / LUGGAGE DIVIDERS / ACCESSORIES MANUFACTURED BY LAND ROVER ONLY

### WE STRONGLY ADVISE


1. You read the manufacturers fitting instructions before you decide if your accessory will work in conjunction with our boot liner

*We are not affiliated with Land Rover, but we have found an informative website*

<http://topix.landrover.jlrext.com/topix/vehicle/lookupForm>

*OR speak in depth with your dealership about the fitting of the accessory. You will find some of the designs are extensively complex.*

2. You purchase a “DOG GUARD REAR PLUS/SPLIT” version boot liner which will allow you to install one of these accessories via the rear passenger seat area.

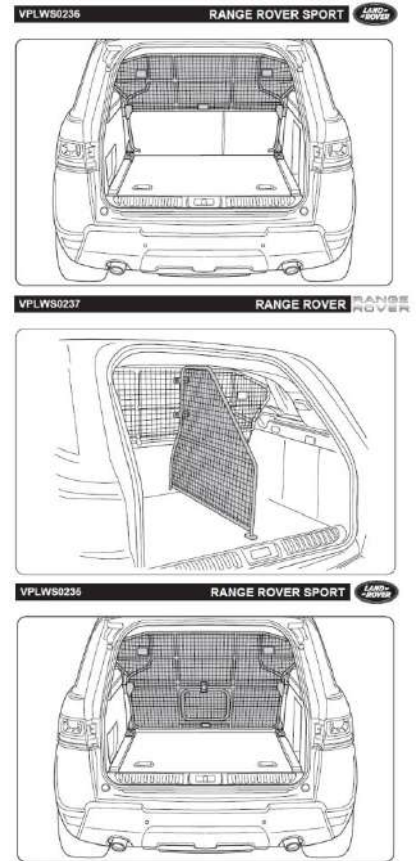

### BASE

- Place the liner into the car and fit the base snugly into place. Locate the 2 cut outs to fit around the main section of the floor brackets. You will need to slide the fabric under the two front chrome screws (loosen with Allen key if necessary)
- Use the self-adhesive loop fastener tabs to attach the tailgate end to the chrome trim. Ensure the base it is sitting straight and not skewed.
- Attach the two ties sewn into the front of the base to the two outer small metal loops recessed into the back of the seats.




Slide fabric under screws



Ties fasten to these metal loops

## FRONT

- You will need to feed the front panel up behind the dog guard. An additional person kneeling on the rear seats would be of great help!!!
- The four hook & loop fastener straps fasten to the outer headrests. Pass around each post and fasten back onto themselves.
- Wrap the large elastic strap around the central fixed headrest. Fasten close to the front panel.

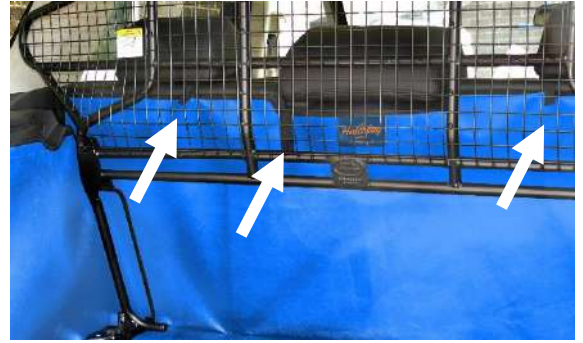

## NOTE: REAR PLUS / SPLIT VERSIONS

- You must unfasten all headrest straps before you recline the rear seat uppers (Please refer to REAR PLUS options on website to see detailed photo')

## SIDES

- Carefully position the side panels snugly into place. The bound cut-outs correspond with the interior lights/power socket on the offside panel.
- Feed the hook fastener section of the side panel behind the Dog guard frame and fasten close to the front and base panel.
- Use the 30mm wide self-adhesive loop fastener to attach the sides to the plastic trim.
- Locate where the two sets of hook fastener welds are on the ends of the side panels. The ref: 121 plastic/loop fastener tabs once fitted will fasten to these.

### Fitting the ref: 121 tabs (see page 2 for photographs)

- Hold back the rubber seal on the door aperture to expose the carpet panel edge.
- Carefully feed the spoon handle into the narrow void behind the carpeted panel. This will help to open-up this void.
- Push the plastic section of the ref: 121 tabs into this void.
- Reposition to align with the hook fastener welds on the Liner.
- Fasten close the hook & loop fastener.



Feed front end behind frame



*Please note some photos are non-specific to your vehicle.*

## Optional extras

### BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



### SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the boot liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap obstructs your rear view: Lower the middle armrest/headrest. Remove the outer headrests, and carefully create openings in the flap to accommodate the outer headrest posts then replace.
- Be aware the Seat flap may cover your rear seat belts, so please ensure they do not obstruct them if in use.



### TAILGATE COVER

- Use the self-adhesive loop fastener to attach the cover to the plastic trim.
- Pass the two hook fastener straps behind and under the door handles. Fasten close to the front of the cover.