

Toyota Yaris 2011 to 2020 (incl. 2014 facelift + excluding Hybrid versions)

Our ref: H0578



The Boot Liner does **NOT** accommodate a False Floor

If you have a false floor please remove it before attempting to fit the boot Liner




PACKING REQUIREMENTS

- BOOT LINER
Minimum of 22 self-adhesive loop fastener tabs
- TAILGATE COVER
Minimum of 14 self-adhesive loop fastener tabs

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the Boot liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any hook & loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

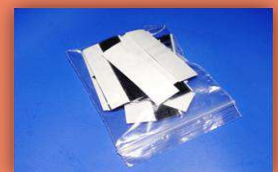

PREPARATION

- Remove the load cover. It may be replaced later.
- Unfold the Hatchbag and place in the vehicle. The panel with the Hatchbag label will sit against the back of the rear seat.

Please note not all of the photographs are specific to your vehicle

BASE

- Position the base snugly into place. Start behind the back of the rear seats
- The hook fastener welded to the reverse face of the liner will attach directly to the carpet panels.



FITTING FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.

REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENER / THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS** (Please refer to **REAR PLUS** options on website to see detailed photo)



SIDES

- Carefully position the side panels snugly into place.
- You will find there will still be a void behind these two areas highlighted in red – *see photos above*
- Use the self-adhesive loop fastener pads to attach the side panels to the plastic.



BACK

Use the self-adhesive loop fastener pads to attach the back panel to the plastic



Please note these photos are non-specific to your car.

TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts



BUMPER FLAP

- Fit Boot liner
- Attach the Bumper Flap to the Loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.





BEFORE APPLYING THE
SELF-ADHESIVE FASTENER

YOU MUST FOLLOW
OUR CLEANING PROCEDURE

SEE PAGE 1
VERY IMPORTANT PREPARATION

