

Range Rover 2013 to 2018

(not 2018 Facelift, not SV Coupe)

Our ref: H0579

- Packing requirements
BOOT LINER
 - 4 x ref 121 plastic/loop fastener tabs
 - 4 x self-adhesive loop fastener tabs
 - 1 x 750 mm (30mm) SA loop fastener
 - 1 x 290 mm (30mm) SA loop fastener
 - 1 x 400 mm (30mm) SA loop fastener
- LOWER TAILGATE COVER
 - 6 x self-adhesive loop fastener tabs
 - 1 x 1160 mm (30mm) SA loop fastener
- UPPER TAILGATE COVER
 - 16 x self-adhesive loop fastener tabs
- WINDOW SILL COVERS
 - 14 x self-adhesive loop fastener tabs




Standard boot liner prepared for additional Window Sill Covers and Seat Flap



REF: 121



SELF-ADHESIVE VELCRO TABS

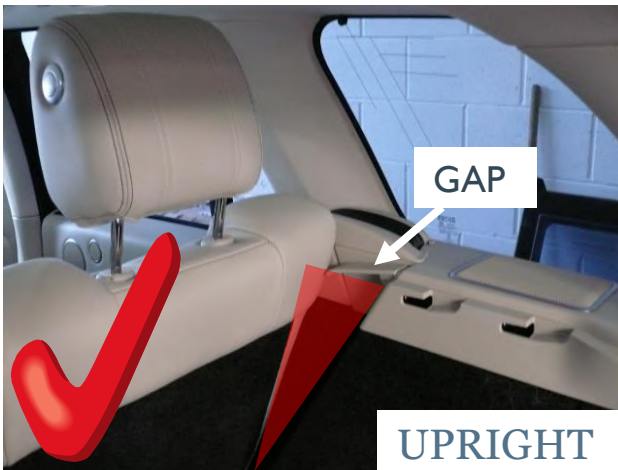

Rear Seats must be positioned in their most upright position

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the boot liner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.



PREPARATION


- Remove the parcel shelf; it can be replaced later, if you do not have the window shelf covers.
- You will need a pair of scissors and a spoon



FITTING

LOWER TAILGATE COVER

- Use the 30mm wide self-adhesive loop fastener to attach the top edge of the tailgate cover to the plastic trim: Cut length to fit
- Lift up the Hinge cover and using the small self-adhesive loop fastener tabs, attach to the metal trim.

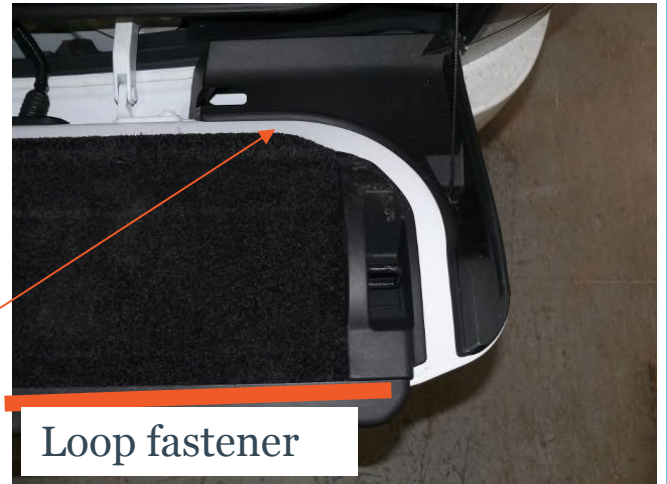


FITTING BOOT LINER

BASE

- Pass the pocket sewn into the under face of the base over the hinge flap.



- Attach the two ties to the small outer two metal “D” rings located on the back of the rear seats at floor level.

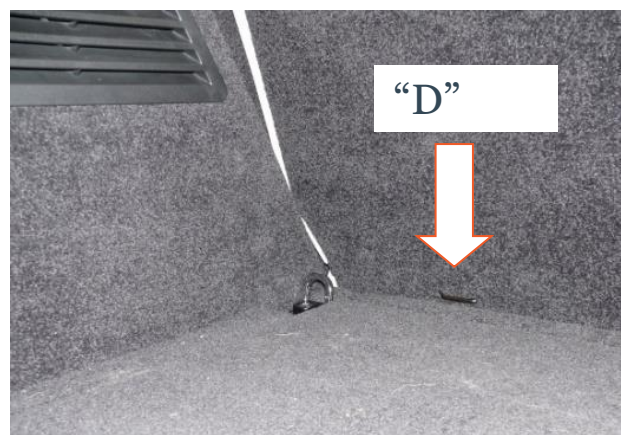

FRONT


- The four hook & loop fastener straps fasten to the outer headrests.
- Pass around each post and fasten back onto themselves.
- Wrap the large elastic strap around the central fixed headrest. Fasten hook fastener to the front panel.



NOTE: REAR PLUS / SPLIT VERSIONS

- **YOU MUST UNFASTEN ALL HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS** (Please refer to REAR PLUS options on website to see detailed photo')

The Side panels cover the rear seat folding mechanism to prevent seats being reclined by accident

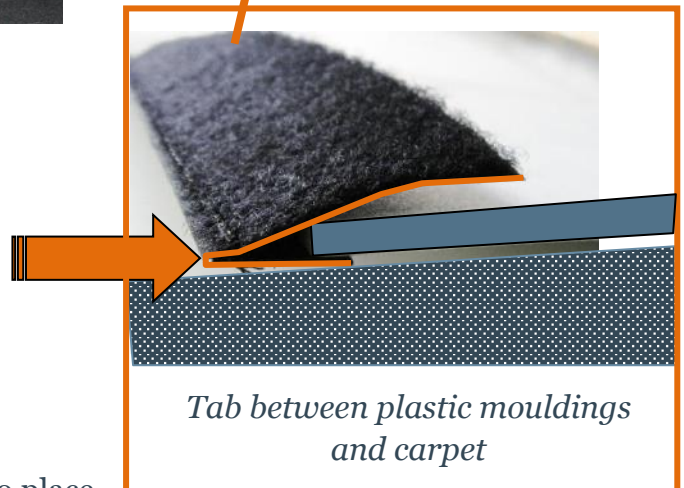

SIDES

- Carefully position the side panels snugly into place.
- The bound cut-out corresponds with the interior light.
- Use the 30mm wide self-adhesive loop fastener to attach the sides to the plastic trim.
- Locate where the two sets of hook fastener welds are on the ends of the side panels. The ref: 121 plastic/loop fastener tabs once fitted will fasten to these.

Fitting the ref: 121 tabs

- Hold back the rubber seal on the door aperture to expose the carpet panel edge.
- Carefully feed the spoon handle into the narrow void behind the carpeted panel. This will help to open up this void.
- Push the plastic section of the ref; 121 tab into this void.
- Reposition to align with the hook fastener welds on the Liner.
- Fasten close the hook & loop fastener.

Optional Extras

Tailored Seat Flap – Special request only!

- ONE PIECE tailored Seat Flap designed t to protect the rear seat headrests
- Fastens on to the boot liner
- MUST be REMOVED when Rear seats are folded.



This flap will obstruct the rear seat passenger seat belts – DO NOT use this flap if you need access to these seat belts.

Window Sill Flaps

- Fit the boot liner first
- Flaps fastens on to the long strip of hook fastener sewn at the top edge of the boot liner side panels.
- Use the small self-adhesive loop fastener tabs, attach to rest to the plastic trim.



DOG GUARDS / LUGGAGE DIVIDERS / ACCESSORIES (LAND ROVER)

WE STRONGLY ADVISE

1

You read the manufacturers fitting instructions before you decide if your accessory will work in conjunction with our boot liner

We are not affiliated with Land Rover, but we have found an informative website

<http://topix.landrover.jlrext.com/topix/vehicle/lookupForm>

OR speak in depth with your dealership about the fitting of the accessory. You will find some of the designs are extensively complex.

2


You purchase a REAR PLUS Version boot liner should you need to load the accessory into the boot area via the rear passenger seat area when installing.

Cutting Hatchbag boot liner Fabric

We try to keep the openings in our liners to a "minimum".
If you wish to access a "D" Ring then you can "carefully" modify the liner yourself.
NEVER cut the bindings or ANY sewn seam. – contact us for a guidance sheet.



Cargo Barrier — Full Height
Keep cargo and animals in the rear of the vehicle separate from the passenger compartment with this barrier that also incorporates an integral ski hatch.
VPLGS0162

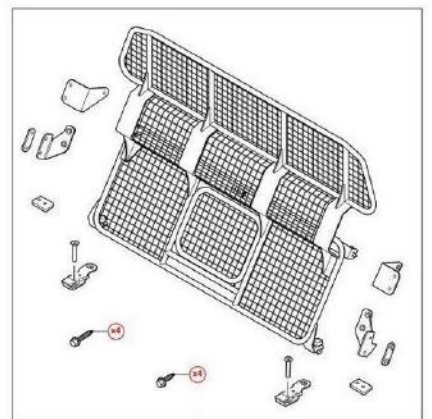

Please note these photos are nonspecific to your vehicle.

Optional extras

BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



SEAT FLAP

- The Seat Flap is designed to be used in conjunction with the Rear Plus Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the boot liner just below the top of the rear seats.
- The Seat Flap will obstruct your rear view if you use it with your rear seats in the upright position.



TAILGATE COVER

- Use the self-adhesive loop fastener to attach the cover to the plastic trim.

