

## RAISED AND LOWERED BOOT LINERS

### FORD B-MAX 2012on

Our ref: H0581

#### PACKING REQUIREMENTS

- BOOTLINER  
700mm cut length of 20mm wide self-adhesive loop fastener
- REAR DOOR COVER  
Minimum of 16 self-adhesive loop fastener tabs



### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

**NOTE:** the adhesive takes 24hrs to reach full adhesion – do not disturb during.



### PREPARATION

- Remove the load cover. It may be replaced later.
- Ensure you have positioned the False floor at the level that suits the model you have ordered.  
**FALSE FLOOR LOWERED BOOT LINER:** False Floor stored in the boot at its lowest level  
**FALSE FLOOR RAISED BOOT LINER:** False Floor raised to its highest level
- Unfold the Hatchbag and place in the vehicle. The panel with the Hatchbag label will sit against the back of the rear seat.

*Please note these photos maybe non-specific to your car.*

## FITTING BASE

- Position the base snugly into place. Start behind the back of the rear seats


### “LOW” FLOOR

*This base panel will sit only up to the rear seat hinge and will not go beyond this.*

- The hook fastener welded to the reverse face of the liner will attach directly to the False floor carpet.

### “RAISED” FLOOR

*Please note the base seam does not follow the carpet exactly!*

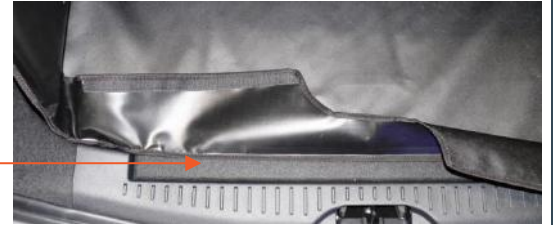

## FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.

### “LOW” FLOOR

*The 3 hook fastener welds on the reverse face of the panel will attach directly to the carpet*



## REAR PLUS VERSIONS

**YOU MUST UNFASTEN THE HOOK & LOOP FASTENER / THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS** (Please refer to REAR PLUS options on website to see detailed photo)



## SIDES

- Carefully position the side panels snugly into place.
- The hook fastener welded to the reverse face of the liner will attach directly to the carpet.

## BACK

- Use the self-adhesive loop fasteners to attach the back panel to the plastic trim only. A small section of this hook fastener will attach directly to the carpet.



# OPTIONAL EXTRAS

*Please note these photos are non-specific to your car.*

## TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



## SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- Lower the headrest before fitting the flap, so as not to impair the driver's rear view.
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests



## BUMPER FLAP

- Fit Boot Liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.

