

NISSAN QASHQAI 2014 to 2021

Our ref: H0584



REF: 113

Packing requirements

- BOOTLINER**
Minimum of 8 self-adhesive loop fastener tabs
Minimum of 12 x REF 113 (double sided fastener patches)
- REAR DOOR COVER**
Minimum of 15 self-adhesive loop fastener tabs




VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.

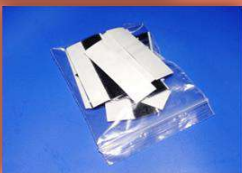

PREPARATION

- Remove the load cover. It may be replaced later.
- Ensure you have positioned the False floor at the level that suits the model you have ordered.

FALSE FLOOR LOWERED BOOT LINER: **False Floor lowered to its lowest level**

FALSE FLOOR RAISED BOOT LINER: **False Floor raised to its highest level**

- Unfold the Hatchbag and place in the vehicle. The panel with the Hatchbag label will sit against the back of the rear seat.

Please note not all of the photographs are specific to your vehicle



BASE

- Position the base snugly into place. Start behind the back of the rear seats
- The hook fasteners welded to the reverse face of the liner will attach directly to the False floor carpet.

FITTING FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.

REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS / THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS (Please refer to REAR PLUS options on website to see detailed photo')**



LOW



RAISED



Ref: 113 Tabs

SIDES

- Carefully position the side panels snugly into place.
- The hook fasteners welded to the reverse face of the liner will attach directly to the carpet. **HOWEVER:** We suggest you attach one of the 12 ref: 113 (double sided fastener patches) under each of these hook fastener welds. The 113 tab attaches directly to the carpet and the liner attaches to the tab.

RAISED Floor version: You may wish to pad the recesses out if your dog is likely to be moving around a lot.



BACK

- Use the self-adhesive loop fasteners to attach the back panel to the plastic trim only. A section of this hook fastener will attach directly to the carpet.



Optional extras

Please note these photos are non-specific to your car.

TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- Lower the headrest before fitting the flap, so as not to impair the driver's rear view.
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts
- The Seat Flap can also be used in conjunction with the Rear Plus Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests



BUMPER FLAP

- Fit Boot Liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.

