

Dacia Duster 2013 - 2018

Our ref: H0586

Packing requirements

BOOTLINER

Minimum of 6 self-adhesive loop fastener tabs

2250mm cut length of 20mm wide self-adhesive loop fastener

TAILGATE COVER

Minimum of 17 self-adhesive loop fastener tabs



Standard FLOW bootliner



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the Bootliner to the plastic / metal trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**. *Unfortunately, we are unable to supply this product, as it cannot be transported via our postal carrier.*

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.



PREPARATION

- Remove the load cover. It may be replaced later.
- Unfold the Hatchbag and place in the vehicle. The panel with the Hatchbag label will sit against the back of the rear seat.

Please note not all the photographs are specific to your vehicle.

BASE

- Position the base snugly into place. Start behind the back of the rear seats
- The hook fasteners welded to the reverse face of the liner will attach directly to the carpet panels.



FITTING FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.



REAR PLUS VERSIONS

- **YOU MUST UNFASTEN THE HOOK & LOOP FASTENER / THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS** (*Please refer to REAR PLUS options on website to see detailed photo*)




SIDES

- Carefully position the side panels snugly into place. This will enable you to establish where + what height the self-adhesive fastener is to be attached. *The photos above illustrate where it is to be attached- see blue highlights.*
- Work from the tailgate end to the front.
- Use the 6 self-adhesive loop fastener pre-cut pads to attach the tailgate end of the sides to the metal. *Refer to orange highlighted fastener pads in the above photos.*

BACK

- Use the self-adhesive loop fasteners to attach the back panel to the plastic

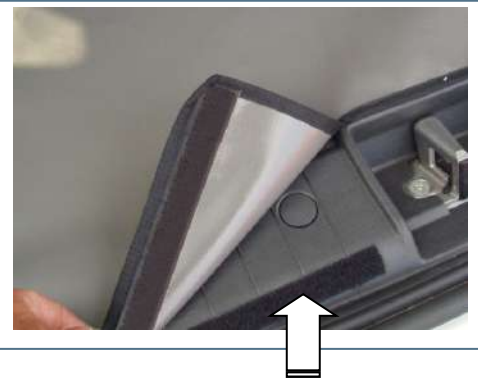

Please note these photos are non-specific to your car.

TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the Rear Plus Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts



BUMPER FLAP

- Fit Boot Liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt, or water can run off.

