

## VAUXHALL CORSA 3 Door 2006 to 2019

Our Ref: H0593

### PACKING REQUIREMENTS

- BOOT LINER**  
Min x 28 self-adhesive loop fastener pads
- TAILGATE COVER**  
Min x 14 self-adhesive loop fastener pads




Position your upper seat backs at the chosen seat rake (as when you placed order!)

If you have a false floor it must be stored at its lowest level. See photo.

### IMPORTANT PREPARATION

To ensure a good bond: when using the self-adhesive hook & loop fastener to attach the Boot liner to the plastic (NOT the carpet), it is most important to remove the silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any hook & loop fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone) We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

NOTE: The adhesive takes 24hrs to reach full adhesion – do not disturb during this time. In cold weather we advise you fit the liner in a warm environment (i.e. run the car till the interior is warm)

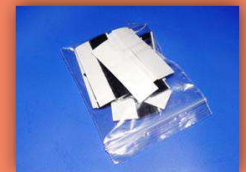

- Remove the load cover cassette
- Ensure your rear seat uppers are reclined to the position you have requested when ordering your liner.
- Position base of liner snugly into place.

### FITTING

#### BASE PANEL

- The hook fastener welds on the reverse side of the liner attach directly to the carpet.

#### FRONT PANEL (back of seats!)

Pass each hook & loop fastener strap around the corresponding headrest post, and fasten close back onto itself. The hook fastener welds on the reverse side of the liner attach directly to the carpet on the back of the seats **OR** use the self-adhesive loop fastener (supplied separately) to attach to a metal back.



Photo A

## BACK PANEL + SIDES

- Use the self-adhesive loop fastener pads to attach the liner to the plastic.

## SIDES

- Position the tape edge under the rubber seal **See Photo A:** This will allow just enough room to fit the self-adhesive loop fastener pads here.

## REAR PLUS VERSIONS

**YOU MUST UNFASTEN THE HOOK & LOOP FASTENER + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS**

## Optional extras

### TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



### BUMPER FLAP

- Fit Boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



### SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

